

Operating Manual

anthos
ht 1, ht 2, ht 3
software version 1.23E

manual version: 05/02
date: 06.05.2002

anthos labtec instruments Ges.m.b.H
Lagerhausstraße 507
A-5071 Wals / Salzburg
AUSTRIA
Tel. +43-662-857220, Fax +43-662-857223
email: anthos@anthos-labtec.com
homepage: www.anthos-labtec.com

anthos

Table of Contents

TABLE OF CONTENTS.....	2
INTRODUCTION	5
WARNINGS AND HAZARDS	6
1 SPECIFICATION ACCORDING TO DIN 58960 PART 4	7
1.1 General information regarding the absorption photometer.....	7
1.2 Declaration of Conformity	7
1.3 Metrological specification	8
1.3.1 Measuring system.....	8
1.3.2 Measuring process	8
1.3.3 Definitions	8
1.3.4 Measuring range, specified according to DIN 58960	9
1.3.5 Rated operating conditions	9
1.3.6 Limits of error and tolerance limits	9
1.4 General technical data	10
1.4.1 Weight and Dimensions.....	10
1.4.2 Environmental influences.....	10
1.4.3 Power supply	10
1.4.4 Data connection	10
1.4.5 Automation.....	11
1.4.6 Supplementary equipment.....	11
1.5 Cleaning	11
1.6 Photometry	11
1.7 Scope of supply	12
1.8 Warning and directions	12
1.8.1 Environmental operating conditions	12
1.9 Re-packing to prevent damage during transport	12
1.10 Description of operating elements	13
2 WARRANTY.....	16
3 START-UP AND SELF-TEST WITH ERROR MESSAGE AND SYSTEM SETUP....	17
3.1 Printout of a self-test protocol	17
3.2 Structure of the main menu	18
3.3 Main menu display	18
3.4 System setup and input of a password.....	18
4 QUICK MEASUREMENTS WITHOUT TEST PROGRAMMING AND STORAGE (MONOCHROMATIC, BICHROMATIC AND MULTICHROMATIC MEASUREMENTS, KINETIC- AND SCAN MEASUREMENT)	20
4.1 F1 - NORMAL: monochromatic/bichromatic endpoint measurement	20
4.2 F2 - MULTI: measurement with several wavelengths simultaneously	21
4.3 F3 - KINETIC: kinetic measurement	21
4.4 F4 - SCAN: scan and agglutination measurements	23
5 TEST DEFINITION - PROGRAMMING OF TESTS (EVALUATION MODES).....	24
5.1 Programming a new application test.....	25
5.2 Test identification: naming, filter selection and range selection	25
5.3 Premeasurement functions - optional parameters for functions being performed prior to measurement.....	26
5.4 Factor dilution & kinetic measurement - plate dilution factor and basic setting for kinetic measurements.....	27
5.4.1 Kinetic data reduction - Selection of data reduction method and parameters for screen graphics during kinetic measurement.....	28
5.5 Plate layout functions - Setting parameters for the validity of blanks, filling direction, replicates and control strips.....	30

5.5.1	Template setup - individual plate allocation with blanks, standards, controls and samples	31
5.6	Report & Evaluation: Setting printout format, relational measurement calculation and setting the basic data for quantitative evaluation	32
5.6.1	Standard points - definition of the concentration and OD-values of the individual standard points	33
5.6.2	How to store a standard curve	34
5.6.3	Quantitative evaluation - Settings for quantitative evaluations such as curve calculations, coordinate scaling, extrapolation, etc.....	35
5.7	Qualitative interpretation - Set to classify samples according to programmable threshold values	38
5.7.1	Cutoffs and ranges - Setting the tolerance values and naming the ranges.....	39
5.8	Control & test validation: Program to evaluate the control, standard and blank replicates and to automatically recognize and eliminate outliers.....	39
5.8.1	Replicate elimination - Select the conditions for the automatic elimination of individual replicates	40
5.8.2	Control validation - Condition to validate the mean value of standards, controls and blanks.....	41
5.9	Safeguarding the test in the test memory	42
6	EDITING, PRINTING AND CLEARING OF DEFINED TESTS.....	43
6.1	Edit Test - Changing a test already programmed.....	43
6.1.1	To copy a test	43
6.2	Print Test - Printout of all programmed test parameters.....	43
6.3	Dir - Printout of the entire test directory	44
6.4	Clear - Erasing individual tests or the entire test memory	44
7	RUN TEST: MEASURING A PLATE WITH A PREPROGRAMMED TEST	45
7.1	Measurement Results	46
7.2	Plate Layout	47
7.3	Quantitative displays	47
7.3.1	Standard Curve	47
7.3.2	Standard Data.....	48
7.4	Quantitative Results	49
7.5	Qualitative Results	49
7.6	Kinetic results displays	49
7.6.1	Kinetic Raw Data	49
7.6.2	Graphics 8/12	50
7.6.3	Zoomed Graphics	50
7.7	Relational Results.....	50
8	PLATES: PLATE MEMORY, RE-EVALUATION OF PLATES WITHOUT MEASURING, PRINTOUT OR VIEW OF MEASUREMENT AND EVALUATION DATA	51
9	ERROR MESSAGES	53
9.1	Error messages in the display	53
9.2	Error messages and warnings in the printout	59
10	COMMUNICATION BETWEEN THE HT1/2/3 AND AN EXTERNAL COMPUTER .	61
10.1	Principles of the communication process	62
10.2	Command keys.....	63
10.3	Generation and transmission of checksum.....	64
10.4	Description of commands.....	65
10.4.1	"V" - transmission of software version number.....	65
10.4.2	"F" - transmission of filters installed in setup	65
10.4.3	"N" - normal measurement with up to 8 wavelengths.....	65
10.4.4	"D" Dual wavelength measurement (bichromatic measurement).....	66
10.4.5	"M" scan measurement of 35 measurement points per well.....	66
10.4.6	"A" Agglutination measurement with adjustable number of well positions (1 to 31 ...	66
10.4.7	"K" kinetic measurement with interval shaking	67
10.4.8	"PD" - Plate directory (transmission of plate memory directory)	68
10.4.9	"PR" - Plate results (transmission of plate results)	68

10.4.10 "TD" - Test directory (transmission of test directory)	68
10.4.11 "TR" - Test run (plate measurement with predefined test)	68
10.4.12 "H" - Shaking	69
10.4.13 "B" - Transmission of plate identification number via barcode.....	69
10.4.14 "R" - Repeat (repeat of the last data transmission)	69
10.4.15 Error messages	69
10.5 Transmission of evaluation results.....	70
10.5.1 Blocks with multiple information	70
10.5.2 Blocks with the same type of information (=record format)	70
10.6 Description of individual blocks	71
10.6.1 Header (block with multiple information)	71
10.6.2 Message (block with multiple information)	72
10.6.3 Sample (record format).....	72
10.6.4 Blanks (record format)	72
10.6.5 Control (record format)	73
10.6.6 Cutoff (record format).....	73
10.6.7 Standards (record format)	73
10.6.8 Curve (Block with multiple information).....	73
10.6.9 Status	74
10.7 Example of data transmission	74
11 MAINTENANCE	76
11.1 General.....	76
11.2 Recommended regular inspection.....	76
11.3 Cleaning	76
11.4 Changing the batteries.....	77
11.5 Replacing the lamp block	78
11.6 Replacing the fuses	80
11.7 Self test - Interpretation	80
11.7.1 Performing the self-test.....	81
11.7.2 Self test interpretation	81
12 PRINCIPLES OF PHOTOMETRIC MEASUREMENT	83
12.1 Units of measurement	83
12.2 Measurement at specific wavelengths	84
12.3 Measurement range calibration	85
12.4 Plate centering	86
12.5 Reference channel.....	87
13 INTENDED USE	88
13.1 Quality control	88
13.2 Calibration	88
13.2.1 Instrument calibration.....	88
13.2.2 Reagent Calibration (Blanking)	88
13.3 Interpretation of measurement results.....	89

Introduction



Picture 1.1: anthos ht2

- The ht by ANTHOS LABTEC is a fully-automated, microprocessor-based microplate absorption photometer. Its range of application covers the universal measurement and evaluation of colorimetric endpoint specifications and kinetic tests.
- The ht 1 covers the visible range starting at 400nm (wavelength range: 400nm - 750nm).
- The ht 2 covers also the UV range starting at 340nm (wavelength range: 340nm - 750nm).
- The ht 3 can additionally temperature control the plate to 30° C or 37° C to the accuracy required in the specification.

Note: The temperature-controlled photometers can hold micro-plates at a certain temperature, which can only be attained by pre-incubation, they are not incubators and may not be used as such.

Warnings and Hazards

► General:

- If Inflammable, toxic or Biologically Hazardous substances are used when operating the equipment, please observe the instructions and precautions enclosed with such substance.
- Never spill fluids in or on the equipment.
- Wash your hands thoroughly after handling test fluids.
- If equipment has been in contact with hazardous substances, it must be disinfected prior to shipment in accordance with the effective provisions.
- Do not touch the plate during movement of the plate transport (risk of injury).
- The equipment may not be opened other than as described in chapter 11, since it contains live parts (danger of life).

► Electrical:

- Voltages dangerous to human life are present in this device. Before removing any covers disconnect the device from the power source.
- Ensure that the power cord supplied with the unit is used.
- The power cord may only be inserted in a socket outlet provided with a protective ground (earth) contact. The protective action must not be negated by use of an extension cord without a protective grounding contact.
- Do not replace fuses without first removing the main power cord.
- Ensure that only fuses with the required rated current and of the specified type are used for replacement. The use of makeshift fuses and the short-circuiting of fuse holders is prohibited.
- When the apparatus is connected to the main power source, the opening of the covers or removal of components is likely to expose live parts. The device shall be disconnected from all voltage sources before it is opened for adjustment or repair.
- Any adjustment or repair of the opened apparatus under voltage should be avoided, but, if necessary, it must be done by qualified service personnel who are aware of the hazards involved.

1 Specification according to DIN 58960 part 4

1.1 General information regarding the absorption photometer

- Type: 8-channel single-beam absorption photometer with auxiliary beam path (reference) and discontinuous wavelength feed (filter) according to DIN 58960 part 2, 1988.

1.2 Declaration of Conformity

EU-Certificate of Conformity

Document-Nr./Month.Year: **QW-16/01-12/08**
Manufacturer: **anthos labtec Instruments Ges.m.b.H.**
Address: **Lagerhausstraße 507**
A-5071 Wals/Salzburg

Product Name: **Absorption Photometers**
Anthos ht1, ht2, ht3

Above mentioned product intended for General Research Lab Use Only.
Above mentioned product complies with the regulations defined in the following European guidelines:

Number: **73/23/EWG**
Title: **Low Voltage Directive**
EN 61010-1/1993 + A2/1995
EN 1658 / 1996

Number: **89/336/EWG**
Title: **Electromagnetic Compatibility**
(Conforms to a Minimum of Performance Criteria B)

EN 61326-1/1997 + A1/1998
EN 61000-3-2/1995 + A1/1998 + A2/1998
EN 61000-3-3/1997 + Corrigendum 1997

This declaration certifies the compliance with above mentioned guidelines.


Safety instructions included with the supplied product information have to be adhered to.

Issued by: **anthos labtec Instruments Ges.m.b.H.**

Place, Date: **Wals/Salzburg, 21.02.2002**

1.3 Metrological specification

1.3.1 Measuring system

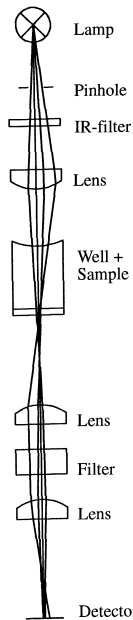

- Beam path: see diagram
- Radiator: preadjusted, automatically-controlled Tungsten halogen lamps (1 lamp per channel)
- spectral apparatus: dielectric interference filter, filter cartridge expandable for up to 8 filters; standard components: 620 nm, 450 nm, 405 nm, (340 nm only ht2 and ht3). Other wavelengths available upon request
- Radiation receptor: silicon-photodiodes
- Store for objects to be analyzed: all 8 x 12 microtitration plates with or without vertical subdivision
- Indication size: $A(\lambda)$ - spectral absorption factor
- Indication range: 0 - 2.5 A (< 400 nm; only ht2, ht3)
0 - 3.0 A (\geq 400 nm)
"normal" mode, 0 - 3.5 A (\geq 400 nm) "extended" mode
- Indication type: Digital display
- Speed per measurement:

monochromatic:	7 sec
bichromatic:	10 sec
kinetic cycles:	5 sec each

1.3.2 Measuring process

- Measuring class index: absorption (corresponds to O.D. - optical density), measuring geometry (see diagram 1)
- Zero point setting: self-calibrating
- Concentration test: comparison value process
- Measured-value test: reference value process
- Control measurements: automatic prior to each measuring operation, self-test after switching on.

1.3.3 Definitions

- **Linearity:** The linearity is measured with a gray scale plate with linear increasing OD values. This is done to prove the linearity of the measurement results within the indication range of the instrument. The specified "...and $\pm 0,005$ OD" must be taken into consideration as un-linearities of the gray scale plate itself.
- **Local Reproducibility:** The local reproducibility proves that the measurement result of a sample is completely independent of its location in the microplate.
- **Short time reproducibility:** The short time reproducibility proves that the measurement result of a sample with a stable value is completely independent of the moment the measurement takes place and therefore reproducible when measuring it several times.
- **Accuracy:** The accuracy of the photometric measurement result proves that also the absolute photometric measurement result of a sample is within the specifications.

The specified "...and $\pm 0,005$ OD..." must be taken into consideration as inaccuracy of the reference instrument.

1.3.4 Measuring range, specified according to DIN 58960

- Spectral absorption factor $A(\lambda)$:
Normal mode:
0 - 2.0 O.D. ($< 400\text{nm}$; ht2, ht3) 0 - 2.5 O.D. ($\geq 400\text{nm}$)
Extended mode:
0 - 3.0 O.D. ($\geq 400\text{nm}$)

The limits of error and tolerance limits listed in Section 1.2.6 may be exceeded beyond this effective evaluation measuring range and for rated operating conditions other than the following section:

1.3.5 Rated operating conditions

- **Measured wavelength λ :** $400 \leq \lambda \leq 750$ (ht1)
 $340 \leq \lambda \leq 750$ (ht2, ht3)
- **Blank value:** is deducted - depending on the application under the testing regulation to be defined by the user - from the measured value of the samples available on the microplate. Since this value greatly depends on the type of plate used, a blank cell is placed at a position on the micro-titration plate to be specified by the user and measured together with all other samples in one operation.
- **Warming-up time:** Ready for operation immediately after switching on and automatic initialization, ready for measurement after 10 minutes pre-warming time.
ht3: 30 minutes after switching on in tempered mode, otherwise like ht1 and ht2.
- **Operating voltage:** 90-130V and 180-260V system voltage
- **Ambient temperature:**
 $15^{\circ}\text{C} - +40^{\circ}\text{C}$ (operation non tempered mode)
 $22^{\circ}\text{C} \pm 1^{\circ}\text{C}$ (operation tempered mode)
 $-25^{\circ}\text{C} - +50^{\circ}\text{C}$ (storage)
- **Relative humidity:**
15 - 85% non-condensing (operation)
 $< 95\%$ non-condensing (storage)
- **Air pressure tolerance:** 54.000 - 106.000 Pascal
- **Height over NN** (operation): to 5000 m

1.3.6 Limits of error and tolerance limits

- Wavelength instability: $\lambda \pm 2 \text{ nm}$ (filter)
- Spectral width at half maximum intensity:
 $\lambda 12 \text{ nm}$ at $I \geq 450 \text{ nm}$
 $\lambda 15 \text{ nm}$ at $I < 450 \text{ nm}$
- Integral portion of misradiation (blocking) measured with all installed filters and band stop filter RG850 3mm: Result is outside of measurement range
- Accuracy (at 510 nm), measuring device:
Schott NG3 1mm $\pm 1\%$ and ± 0.005 O.D. at 1 O.D.
- Linearity (at 620 or 550, 540, 492, 510), measuring device:
Grey-Scale NG4, NG5, Schott BK7

- 340 - 399nm:
 $\leq \pm 0.7\%$ and ± 0.005 OD from 0.1 OD to 2 OD (ht2, ht3)
- 400 - 750nm:
 $\leq \pm 0.5\%$ and ± 0.005 OD from 0.1 OD to 1.4 OD
 $\leq \pm 0.75\%$ from 1.3 O.D. to 3.0 O.D.
- Local reproducibility at 1 O.D., measuring device:
Schott NG3 1mm 510nm: $\leq \pm 1.0\%$
- Short-time reproducibility at 1 O.D.:
340 - 399nm:
 $< \pm 0.5\%$, measuring device: Hoya LA100 (ht2, ht3)
400 - 750nm:
 $< \pm 0.3\%$, measuring device: Schott NG3 1mm
- Temperature instability for ht3:
After the device is pre-heated for 3 hours at $22^\circ (\pm 1^\circ)$ room temperature, the temperature in the incubation chamber is $\pm 0.1^\circ$ stable at 30° and $\pm 0.2^\circ$ stable at 37° upon reaching the control point (30 minutes per temperature setting).
The tolerances of the measuring devices are based on the manufacturer's information.

1.4 General technical data

1.4.1 Weight and Dimensions

- Weight: ht1, ht2: 13.5 kg, ht3: 18 kg net
- Charging space (width x length): 1700 cm² bench model
- Dimensions (width x height x length):
34 cm x 17 cm x 44 cm (ht1, ht2)
34 cm x 23 cm x 44 cm (ht3)

1.4.2 Environmental influences

- Radio interference according to DIN VDE 0871: threshold class B for interference voltage, magnetic and electric interference field force
- Acoustic power level according to DIN 45 635 part 19: 40 dbA
- Outer lighting influences: Precaution, avoid direct sunlight.

1.4.3 Power supply

- Consumption: input 140VA max at 230V operating voltage.
- Adjustable operating voltage: 90-130V / 180-250V
- Mains frequency: 47 - 63 Hz.

1.4.4 Data connection

- Data interfaces: Serial RS232 (V24) 9-pole plug parallel Centronics printer interface (25-pole socket).
- User interface: keyboard with function keys
16-line LCD display for 40 characters per line in the normal text mode (240 x 128 pixels) with graphics capabilities.

1.4.5 Automation

- Remote controlled via RS232.

1.4.6 Supplementary equipment

- Barcode spacing scanner, optional
- Printer: all EPSON/ESC-P or IBM-compatible parallel 9- and 24 matrix printers with parallel interface.
- Transfer rate of reader selectable between 300 and 19200 baud.

1.5 Cleaning

- **Cleaning:** for all accessible housing parts we recommend cleaning with a disinfecting agent commonly used in laboratories (effective against hepatitis B) or a 70% alcohol solution.
- **Decontamination:** If the equipment has been in contact with infectious substances, it may be disinfected with 37% formaldehyde steam at a temperature of 40°C (+/- 4°) for 6 to 8 hours in an air volume of approximately 160L and a relative humidity of 85 - 95%. The filters may be disinfected with a 96% ethyl alcohol solution and optical paper by means of short manual cleaning.

Note Warnings regarding the use of toxic or inflammable liquids (page 6)! Take care on proper ventilation.

1.6 Photometry

- Monochromatic, bichromatic and multichromatic measuring with continuous scanning.
- Types of measuring: Endpoint measuring, kinetic measuring and scan measuring.
- Internal programs: Memory capacity for at least 30 application protocols (tests) and 10 plate files (identification data and test values).
- Evaluation potential: qualitative (flexible threshold value input, up to 4 threshold values, individual group descriptions), quantitative (various curve fit modes, point to point, linear regression, cubic spline, 4 parameter fit), kinetic data reduction (computation of average slope, maximum slope, delta OD, delta OD-maximum slope, delta t-maximum slope, delta t-relative, delta t-absolute). Relational calculations with free formula input etc.

Combination of all evaluation possibilities (quantitative and/or qualitative evaluation of concentrations, values for data reduction and relation values). Plates/sample validation and elimination of replicates.

1.7 Scope of supply

3 filters (620 nm, 450nm, 405nm) - with ht1

4 filters (620 nm, 450nm, 405 nm, 340 nm) - with ht2 and ht3,

1 filter case with lock-bar

1 dust-cover

1 user's manual

2 spare air filters, 2 spare fuses.

1.8 Warning and directions

If inflammable, toxic or biologically hazardous substances are used when operating the equipment, please observe the instructions and precautions enclosed with such substances.

Never spill fluids in or on the equipment. Wash your hands thoroughly after handling test fluids.

If the equipment has been in contact with hazardous substances, it must be disinfected prior to shipment in accordance with the effective provisions.

Do not touch the plate during movement of the plate transport (risk of injury).

The equipment may not be opened other than as described in the chapter 11, since it contains live parts (danger to life).


1.8.1 Environmental operating conditions

- Flat, dry, clean and vibration-proof working area (44 cm x 34 cm - length x width)
- Additional room for cables, connections, printer, etc.
- No direct sunlight
- Clean ambient air (free of corrosive vapors, smoke and dust)
- Ambient temperature between 15°C and 40°C,
for HT3 : 15° C - 22°C in temperature mode.
- Humidity between 15% and 85%.

1.9 Re-packing to prevent damage during transport


The original HT2 packing has been specially designed for this equipment. The drop and vibration tests described in the specification cannot be guaranteed with any other packing.

It is therefore recommended to save the original carton with its foam parts (1), accessories box (2) and plate-transport brace (3).

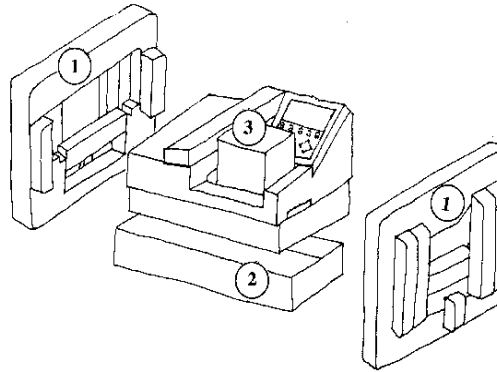


1.10 Description of operating elements

Front view:

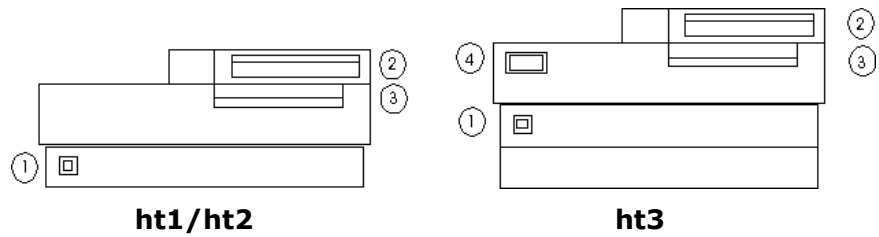


1. Main switch
2. Display with keyboard
3. Plate transport system
4. Temperature display (ht3 only)

Rear view:

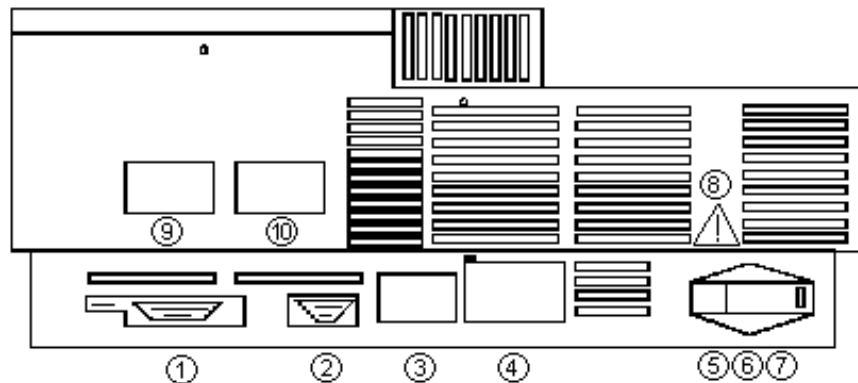


1. Parallel interface (Centronix)
2. Serial interface (RS232)
3. Type-plate (with serial number)
4. Warning: „For continued protection against fire hazard replace only with the same type and rating of fuse“
5. Mains connector
6. fuse holder (250V, 2 A, slow, 2 pieces)
7. Mains switch (115V/230V) with integrated mains filter
8. Symbol for: Notice user manual!
9. Warning: „Let instrument cool down before opening“
10. Warning: „ Before opening disconnect power cord. Opening by authorized personnel only“

Side view:

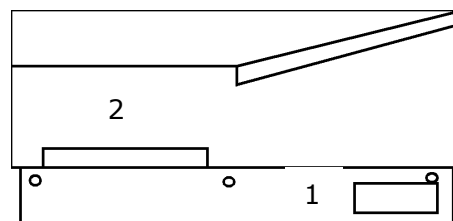

Keyboard:

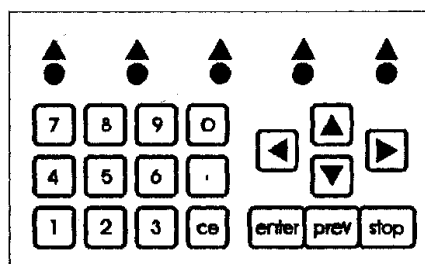

1. Function keys (F1 - F5): selection of menu and input on monitor
2. Numerical keyboard with decimal point
3. CE (clear/entry): deleting- and change key
4. Cursor key
5. ENTER: Confirmation of entries
6. PREV (previous): one step back to previous function or page
7. STOP: return to main menu

2 Warranty

A warranty period of 12 months shall be granted to the original buyer of the HT2/HT3.

This warranty shall lose effect if:

- the equipment is not used in the defined scope of application,
- the equipment has obviously been damaged by external influences which are not in accordance with the provisions for the nominal range of use,
- the equipment has been modified or parts exchanged by a person other than ANTHOS LABTEC personnel or an authorized servicing agent,
- the equipment's serial number is no longer legible, has been removed or altered,
- the equipment has not been installed in accordance with the instructions supplied by ANTHOS LABTEC.
- the equipment has been damaged during return transport due to false packing (e.g. not in original packing material).

Only those persons may operate the equipment who are technically qualified and can interpret the data properly.

If a warranty is brought into operation, ANTHOS LABTEC shall repair or replace any defects which have resulted from faulty material or during production as it deems fit. No costs shall arise for the client.

All components found in the original equipment shall be available for a period of 5 (five) years after production.

This warranty contains all the obligations which ANTHOS LABTEC must fulfil and can only be amended upon the written consent of ANTHOS LABTEC.

3 Start-up and Self-test with error message and system setup

- Place the switched-off device on a suitable working surface.
- Connect the Epson ESC/P or IBM compatible 9 or 24 matrix printer to the Centronics plug and/or computer to the RS232 interface.
- Check the mains voltage and plug on the back of the device.
- Remove filter case from the additional carton and check firm support of filters and lock bar.
- Connect power cable to standard mains plug.
- Switch on main switch (left bottom). The Reader performs the complete initialization including self-test in approx. 40 seconds.
- When the display "No plate carriage detected" appears, press ENTER.
- When the display "Please insert filter slider" appears, push the filter case into the right side filter carriage to the end stop and press any key.
- This automatic self-test re-calibrates the device and checks if the electronic and mechanical components are in the proper service condition.

The following error display may appear:

- **System halted:** call service technician
- **Lamp controller check not OK:** call service technician
- **Lamp controller check error - check power supply:** call service technician
- **ADC check not OK:** call service technician
- **Plate check not OK:** Check microtitration plate in the plate transport, otherwise call service technician
- **Check filter slider:** Check filter slider in the device for position and completeness, otherwise call service technician
- **No filter detected:** No filter in this position - check filter adjustments.
- **OV-energy/low energy/no energy:** check filter adjustments and positions, otherwise call service technician.

For further information on error interpretation and correction press F3 after the self-test has been performed. By pressing F5 the reader goes to the main menu.

3.1 Printout of a self-test protocol


Upon completion of the self-test after approx. 5 sec. the main menu appears. If a printout of the results is desired, press one of the following function keys within this waiting period.

F1-Report: Evaluated test printout

F2-Raw Data: Printout of all raw data - important for service technician.


Continue to main menu with F5 (see diagram).

3.2 Structure of the main menu

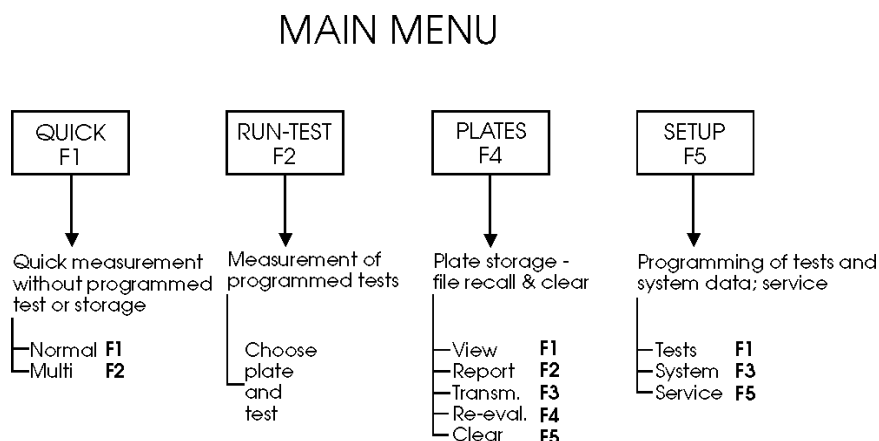


3.3 Main menu display

- The position of the plate and filter case is displayed. Modifications are entered with the cursor keys.
- (Only for HT3): Temperature control is switched on/off with 0/1 on numerical keyboard.
- Cartridge: Since no external memory expansion is installed, no adjustment possible.
- Submenus available using the function keys:
F1 - QUICK / F2 - RUN-TEST / F4 - PLATES / F5 - SETUP

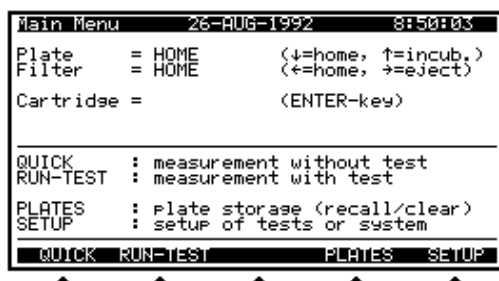

3.4 System setup and input of a password

- In the main menu press F5 (SETUP) and then F3 (SYSTEM).

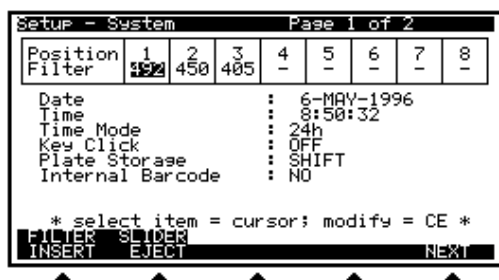


- Press F2 (SLIDER EJECT), remove filter case from the left side.

Check setting of:

- Filter position and wavelength: To change, delete wrong entry with CE and enter new value using the numerical keyboard. Put filter case into reader.
- Press F1 (FILTER INSERT), automatic insertion of filter case.
- Date and time (important for printed protocols)
- Time mode (12 or 24 hour cycle)
- Key click (to turn key clicking on or off)
- Plate storage (shift mode: a plate file already printed will be deleted automatically when the plate memory overflows (10 plates)); Protect mode: plate files can only be deleted manually.
- Internal barcode (NO: not installed; YES: hardware installed)

To turn the page, press F5 (NEXT).

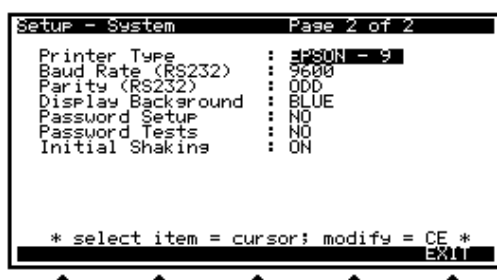

- Printer type (choose between EPSON and IBM 9 or 24 matrix compatible printer. Many ink-jet printers are IBM-24 compatible, except HP-Deskjet which cannot be used)
- Baudrate (proceed to selection display by pressing CE, select value from 300 to 19200 bauds).
- Parity (RS232) (even or odd parity)
- Display background (blue or white background)

Entering a password

Input of a protection code for setup and/or tests:

Modifications or deleting processes are only performable after input of the preset password.

- Password Setup: press CE, enter a 4-digit, numerical password, VERIFY input (input repetition), confirm with ENTER
- Password Tests: see password setup. If password is activated, the functions CLEAR and EDIT are not applicable anymore in the TESTS MENU.


NOTE: If a password can not be remembered, please call your local anthos distributor (by means of a super user code, unknown passwords can be deleted).

Leave the menu with F5 (EXIT) and return to the main menu by pressing the STOP or PREV key. Instrument Setup is stored when instrument is switched off.

- Initial Shaking (if ON, the plate transport starts moving with a shake in order to stabilize the liquid meniscus, without respect if additional shaking is set up in the program)

4 QUICK measurements without test programming and storage (MONOCHROMATIC, BICHROMATIC AND MULTICHROMATIC MEASUREMENTS, KINETIC- AND SCAN MEASUREMENT)

4.1 F1 - NORMAL: monochromatic/bichromatic endpoint measurement

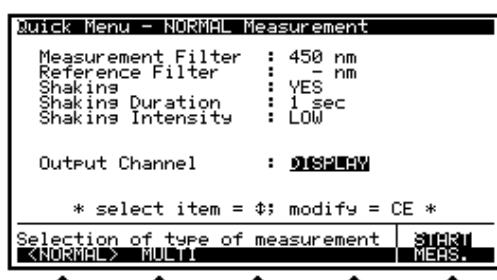

- Measurement filter: select measurement filter (press CE and move cursor to desired wavelength, ENTER)
- Reference filter: select reference filter (as above; if no reference filter is required, press NONE)
- Measurement range: set measurement range, basic setting: normal mode

Note: Using extended mode the indication limit is extended from 3.0 OD to 3.5 OD. Wavelengths under 400 nm are not permitted. Measurement time is doubled.

- Shaking: plate shaking selectable by pressing CE to YES prior to measuring ; enter time in seconds using keyboard, choose shaking intensity from three levels (enter menu by pressing CE: select low/medium/high).
- Output channel: three output channels available.
 - Display: Measuring values of the measurement filter (M), reference filter (R) and their difference (M-R) are displayed on the screen, printout of difference or transmission of measurement data also possible after measurement.
 - Printer: Immediate measurement printout; printout format selectable between M, R, M-R (output of three values per plate position) and Delta OD (output of differences for measurement and reference filters only).
 - RS232: Transmission of measurement data to external computer.

Start the measurement with F5 - START MEASUREMENT

4.2 F2 - MULTI: measurement with several wavelengths simultaneously



- Number of wavelengths - (min = 2, max = 8) is entered using the numerical keyboard.
- Wavelength #1, wavelength #2, etc. - press CE to display menu, select filter with the cursor and press ENTER.
- Output channel : choose from three output channels:
 - Display: Measurements are displayed on the screen, subsequent printout or transmission of measurement data also possible after measurement
 - Printer: Immediate printout, highest measurement of each well will be marked (wavelength evaluation)
 - RS232: Transmission of measurements to external computer.

Starting the measurement with F5 - START MEASUREMENT.

4.3 F3 - KINETIC: kinetic measurement



- Measurement filter - to select filter press CE, move cursor to desired wavelength and press ENTER.
- Reference filter - to select filter press CE, move cursor to desired wavelength and press ENTER.
Usually no reference filter is used for kinetic data since a reference reduction only shifts the relevant reaction process up or down, which has no effect on the results of the data reduction.
- Measurement range - basic setting: Normal Mode (in Extended Mode indication limit is extended to 3.5 OD)

Note: Wavelengths under 400 nm are not permitted using Extended Mode. Measurement time is doubled.

- Interval: interval setting in seconds from the beginning of one measurement cycle to the beginning of the next cycle (maximum time = 36000 seconds).

Minimum Intervals:

Normal Mode:

Single Wavelength:	5 sec
Single Wavelength+ Shaking:	7 sec + Shake Duration
Dual Wavelength:	10 sec
Dual Wavelength + Shaking:	12 sec + Shake Duration

Extended Mode:

Single Wavelength:	10 sec
Single Wavelength + Shaking:	12 sec + Shake Duration
Dual Wavelength:	20 sec
Dual Wavelength + Shaking:	22 sec + Shake Duration

- # cycles: number of measurement cycles to be performed (max = 40, press CE and enter number using keyboard).
- Shaking: plate shaking during each measurement cycle: press CE and change to YES, enter duration in seconds using keyboard, choose shaking intensity from three levels: low, medium, high).
- Output channel: choose from three output channels:
 - Display: Measurements are displayed on the screen, subsequent printout or transmission of measurement data also possible after measurement.
 - Printer: Immediate printout; for the printout format select either raw data (printout of measurement data for each cycle) or maximum slope (maximum reaction slope in mOD/min).
 - RS232: Transmission of measurements to external computer.

The kinetic reaction progress can be viewed directly on the screen and is displayed graphically after measurement. To optimize the display range of the curve, both of the following parameters must be set:

- OD range: the range in [mOD] by which the test fluid will increase or decrease (press CE and enter number using the numerical keyboard)
- Reaction: expected reaction process (increasing / decreasing).

Inaccurate inputs have no effect on the quality of the measurement data.


To start the measurement press F5 - START MEASUREMENT.

For the output channel = Display, press F5 - SELECT SCREEN after the measurement has been performed and choose one of the following screens:

- Maximum slope: the measurements are reduced to the value of the maximum slope of the reaction in [mOD/min].
- Raw wells: the measurement for each cycle is displayed (retrieve measurement for various cycles with cursor).
- Graphics 8/12: Curves per well displayed in series or rows (switch with F2). The OD-range and the reaction can be changed subsequently using F4 (limits).
- Zoomed graphics: The reaction of a well is enlarged on the screen.

The data of a kinetic test remains in the Quick Menu memory F3 (KINETIC DATA) until another kinetic- or scan measurement is performed, even if the device is switched off in the meantime. Switch Output channel to "display" if kinetic data are to be viewed.

4.4 F4 - SCAN: scan and agglutination measurements

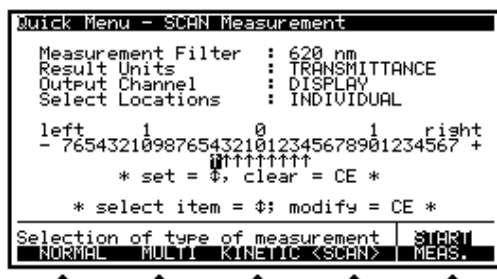


- Measurement filter: press CE, move cursor to desired wavelength and press ENTER.
- Result units: Measurements in transmission or absorption units (change by pressing CE).
- Output channel: Choose from three output channels:
 - Display: Measurements displayed on the screen, a subsequent printout or transmission of measurement data also possible after measurement.
 - Printer: Immediate printout of all values of the predefined well positions.
 - RS232: Transmission of measurements to external computer.
- Select locations: 35 points are scanned in the well's profile (+/- 17 from the centre of the well). These 35 points may be individually selected for printouts of the measurement. Press CE (= individual), move cursor down one row, press CE and move point by point to the desired locations with the right cursor and select with the upper cursor.

Start measurement with F5 - START MEASUREMENT

Output channel = display: After each measurement, the absorption or transmission profile of the well is displayed on all 35 grid points, also indicating the absorption value in OD or the transmission value in % for the locations selected. Basic setting = centre point "0". Other wells can be chosen by using the cursors. The function keys provide:

- **F1-Print:** Printout of measurements for all selected locations
- **F2-Transmit:** Transmission of measurements to an external computer
- **F3-LOC -:** Moving the location cursor in the graphic display to the left
- **F4-LOC +:** Move the location cursor in the graphic display to the right
- **F5 - Print Graphics:** Printout of all 96 grid profiles of a certain plate in the selected unit (absorption/transmission).

5 Test Definition - Programming of tests (evaluation modes)

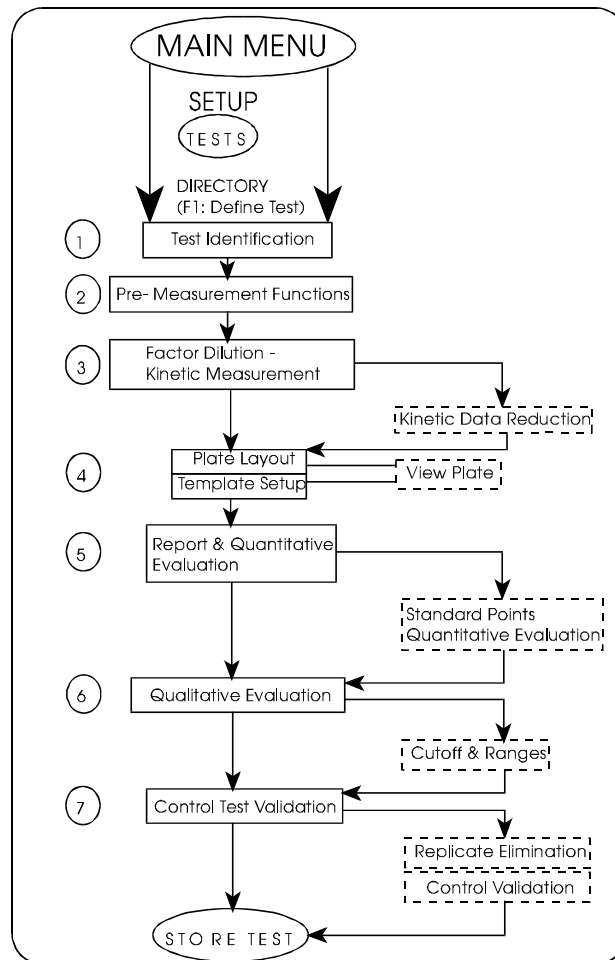

Since all programming options together are seldom used during one test, optional settings may be skipped. If a special point, e.g. "quantitative evaluation" is required, the question regarding the use of such function must first be answered with YES (press CE) before the corresponding menu (e.g. "standard points" and "quantitative evaluation") is displayed.

This chapter will describe all of the display menus. The flow diagrams will serve as an easy reference to select the program sections required.

5.1 Programming a new application test

Setup - Tests			
#	ID#	Name	Size
1	001	ELISA1	310
2	002	KINETIK	313
3	003	STANDARD	239

Memory free: 7330 bytes; used: 862 bytes
 * select test = cursor; storage = enter *
 DEFINE EDIT PRINT DIR CLEAR

Press F5 - SETUP in the main menu, then press F1 - TEST to continue to the directory of all tests previously programmed. If a password has been programmed in the system setup, enter password and confirm with ENTER or skip by pressing ENTER.

Press F1 - DEFINE to begin programming a new test.

5.2 Test identification: naming, filter selection and range selection

Define Test - Test ID & wavelength(s)	
TEST ID #	: 4
TEST NAME	: TEST1
MEASUREMENT FILTER	: 450 nm
REFERENCE FILTER	: - nm
MEASUREMENT RANGE	: NORMAL
* select item = cursor; modify = CE *	
NEXT	

- Test ID #: Select an individual test identification number. The first vacant position in the test memory is preset. Change by pressing CE and enter number using the keyboard. Press ENTER.
- Test name: Select an individual test name. May be skipped. Begin setting by pressing CE. When the alphabet appears on the screen, use the cursors to select the row with the desired letter. Press the function key (F1 - F5) to select the respective column. Delete characters with CE. Confirm the complete test name with ENTER.
- Measurement filter: Select a measurement filter. Go to menu with CE, move cursor to desired wavelength and confirm with ENTER. The preset filters are those set in the SETUP menu. Check for accuracy.
- Reference filter: Select a reference filter (optional, may be skipped). Go to menu with CE, move cursor to desired wavelength, confirm with ENTER.
- Measurement range: The measurement range is preset to „normal range“ (indication range: 0 - 3.0 OD). Change to „extended range“ (indication range 0 - 3.5 OD) by pressing CE.

Note: in Extended Mode the indication limit is extended to 3.5OD. Measurement time is doubled and the use of wavelengths under 400 nm are not permitted.

Turn page with F5 - NEXT.

5.3 Premeasurement functions - optional parameters for functions being performed prior to measurement



- Preshaking: Plate, Shaking to improve the fluid homogeneity at a maximum filling capacity of 200 µl per well. Change to YES by pressing CE, enter duration in seconds using the keyboard, and select shaking intensity from three levels (low / medium / high).
- Prewaiting: Waiting time prior to measuring. Set to YES by pressing CE, enter desired time in seconds using the keyboard (Maximum time = 99 sec)
- Monitoring: Automatic observation of certain wells. Measurement is started upon reaching a certain limiting value. Change to YES with CE. Additional settings:
- Well positions: Setting the plate positions to be observed. Press CE, position cursor in the menu, select with F4 (SELECT), delete with F3 (CLEAR) or F2 (CLEAR ALL), confirm with ENTER. The selected positions may be observed in two ways:
- Monitoring mode = "relative": Input of a certain OD value in [mOD] (OD increase / OD decrease). At the point of time when at least one of the selected wells has reached the defined decrease or increase measurement is started.
- Monitoring mode = "absolute": Input of an upper and a lower threshold in [mOD]. Again, measurement is only started when at least one of the selected wells has reached this threshold.

Note: Upper threshold value must be higher than the lower one.

- Read interval: Select time interval for observation measurements in seconds.

Turn page with F5 - NEXT.

5.4 Factor dilution & kinetic measurement - plate dilution factor and basic setting for kinetic measurements



- Factor dilution: Press CE and enter multiplication factor to be used automatically for all measurement values (OD values or data reduction values) of the plate (including blanks, controls and standards). Use the numerical keyboard. The original measurement results will not be displayed any longer.
- Kinetic readings: Change to YES with CE.
- Kinetic mode (normal/special): In the normal mode, up to 40 consecutive kinetic cycles may be performed automatically. The special mode (change with CE) is only suited for two-point kinetics with long interval time. The plate is stored with the status "s-kin" in the plate memory (submenu PLATES) after the first kinetic cycle. The reader is immediately available for other measurements. A second cycle can be run after any period of time by recalling the test in the menu RUN TEST.

Note: Performing "special kinetics", ensure identical plate ID number of both cycles. Both measurements will automatically be evaluated as one special kinetic reading. The measurement results will be in Delta OD-values (mOD).

The following parameters will only be visible if kinetic readings = YES was selected.

- Interval time: Note interval time setting in seconds from the beginning of one measuring cycle to the beginning of the next cycle (maximum time = 36000).

Minimum Interval Time:

Normal Mode:

Single Wavelength: 5 sec
 Single Wavelength+ Shaking: 7 sec + Shake Duration
 Dual Wavelength: 10 sec
 Dual Wavelength + Shaking: 12 sec + Shake Duration

Extended Mode:

Single Wavelength: 10 sec
 Single Wavelength + Shaking: 12 sec + Shake Duration
 Dual Wavelength: 20 sec
 Dual Wavelength + Shaking: 22 sec + Shake Duration


- Number of cycles: number of measurement cycles to be performed (max. = 40). Press CE, enter number on keyboard, confirm with ENTER.

- **Shaking:** Shaking of plate before each measuring cycle. Change to YES with CE, enter duration in seconds using keyboard, select shaking intensity from three levels: low / medium / high. Maximum filling capacity per well: 200 μ l; maximum shaking duration: 99 sec. Turn page with F5 - NEXT.


5.4.1 Kinetic data reduction - Selection of data reduction method and parameters for screen graphics during kinetic measurement

Data reduction: Selection of data reduction method. Go to display menu with CE. Choose from the following parameters:

- **Delta OD:** Difference between two kinetic measurements in [mOD]

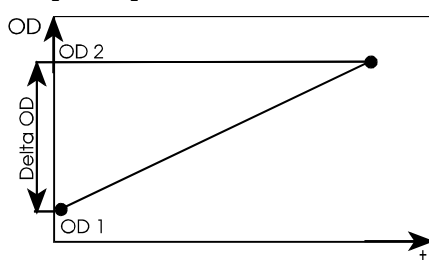


- **Average slope:** Slope in [mOD/min] between the first and last kinetic cycle. Only suited for linear reaction progressions with few cycles and measurement points.

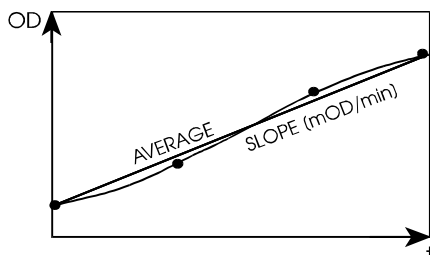


- **Maximum slope:** Maximum slope of the curve in [mOD/min]. (Maximum reaction speed).
- **Type of evaluation:** Linear regression lines connect four measurement points at a time (line through measurement points #1, #2, #3, #4, then through #2, #3, #4, #5, through #3, #4, #5, #6, etc).

The line with the highest slope is calculated. The accuracy of this calculation depends on the number of measurement cycles selected. Number of regression lines = number of measurement cycles $v - 3$ (see diagram).

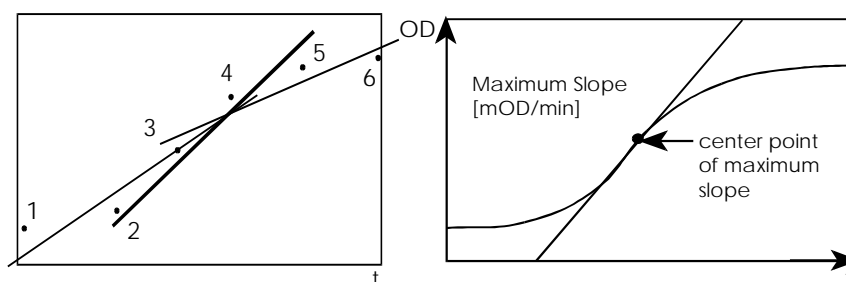


- Delta t - maximum slope: Time difference in [sec] between the first measurement and the occurrence of the center point of the maximum slope.
- Delta OD - maximum slope: Difference in [mOD] between the first measurement and the center point of the maximum slope.

Calculation of the center point of the maximum slope: Center point between the four measurement points of the regression line with the maximum slope.

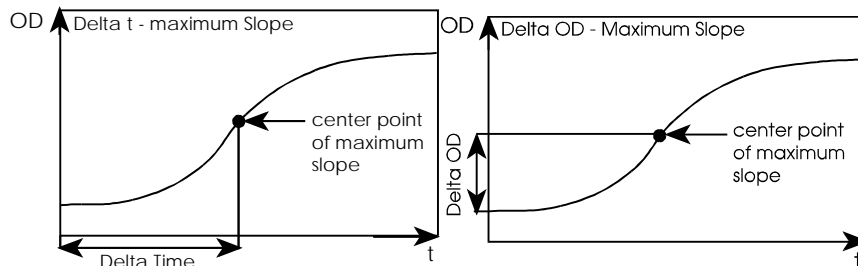

- Delta t - relative: Time in [sec] from the first measurement to reaching a set increase/decrease in [mOD].
- Delta t - absolute: Elapsed time from one preselected threshold value to another.

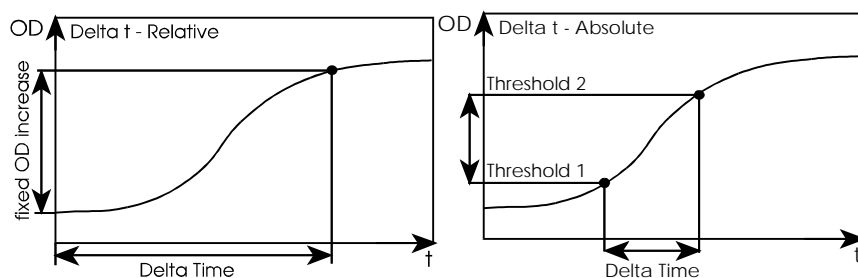

Online Kinetic - Graphic Parameters

The kinetic reaction can be observed directly on the screen and is graphically displayed after measuring. To optimize the display range of the curve, the following parameters must be programmed. (Inaccurate inputs have no effect on the quality of the measurement data):

- OD-range (graphics): Select a value in [mOD] by which the measurement data is expected to increase or decrease (press CE and enter numbers on keyboard)
- Expected reaction: Reaction process to be expected (increasing / decreasing)
- Col (1-12) / Row (A-H): Graphic display of the reaction process on the screen for a certain row (row) or column (col) during measurement. Press CE, select a column between 1 and 12 or a row between A and H with the cursor and the respective function key, confirm with ENTER.

Turn page with F5 - NEXT.

5.5 Plate layout functions - Setting parameters for the validity of blanks, filling direction, replicates and control strips



- **Blank validity:** Validity of the blank value positions on the plate:
- **Plate:** Mean value of all individually positioned blanks is automatically deducted from other measurement values.
- **Row (12):** Free configuration of the blanks on the entire plate. The mean value of all blanks in each row is deducted from each sample of this row.

e.g.: Setting blanks on plate position A01 and A08. Mean value of A01 and A08 = $(A01 + A08) / 2$. This mean value is deducted from each sample of this row (A02 / A03 / A04 / A05 / A06 / A07 / A09 / A10 / A11 / A12).

- **Col (8):** Free configuration of the blanks on the entire plate. The mean value of all blanks in a certain column is deducted from each sample of this column.

e.g.: Setting blanks on A01, B01 and D01. Mean value of A01, B01 and D01 = $(A01 + B01 + D01 / 3)$. This mean value is deducted from each sample of this column (C01 / E01 / F01 / G01 / H01).


- **Automatic replicates:** automatically set replicates, valid for all samples, blanks, controls and standards on the plate. Set the following parameters:
- **Direction:** Direction (horizontal / vertical) of replicates

[illegible]


- **Number of wells:** Number of replicates (maximum of 12 replicates for horizontal direction; maximum of 8 replicates for vertical direction)
- **AG-control strips:** Antigen control strip setting. A control sample, which is automatically deducted, is assigned to each sample. The sample and control sample have the same numbering on the printout. The control well sample positioning depends on the filling direction and the sample control setting combination of the reader.

Note: AG-control strips cannot be used together with the automatic replicates. Set the following parameters:

- **Direction:** Direction (horizontal / vertical), i.e. one row/column consists of samples only, the next row/column consists of control samples only.

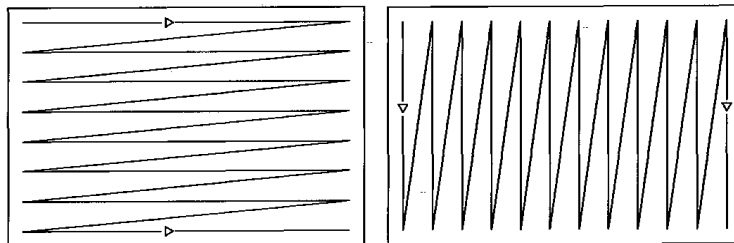

- **Control well:** Position of the control wells before/above (= first) or after/under (= second) the sample, respectively.
- **Filling direction:** Filling/pipetting direction (horizontal/vertical).

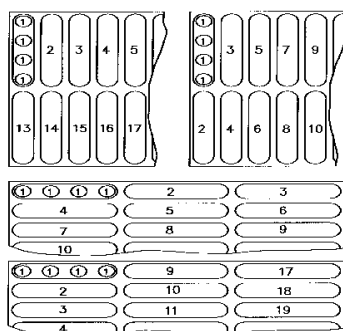


Note: Groups of replicates are sorted according to their replicated-direction AND the filling direction.

Press F4 - VIEW to display the current plate allocation.

Press ENTER to return to the display menu „Plate layout functions“.

Turn page with F5 - NEXT.

5.5.1 Template setup - individual plate allocation with blanks, standards, controls and samples

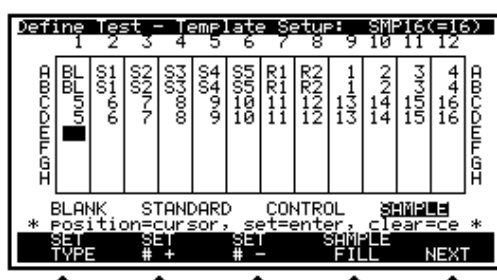

- **Set blanks:** Move cursor to desired position and press ENTER.
- **Set standards:** Press F1 (SET TYPE) until "Standard" is marked. The standard number is displayed at the upper right


screen corner (up to 12 different standards may be set on the plate). For higher standard numbers press F2 (SET#+), for lower standard numbers press F3 (SET#-). Move cursor to the desired position and confirm with ENTER.

- **Set controls:** Press F1 (SET TYPE) until "Control" is marked. The control number is displayed at the upper right screen corner (up to 4 controls may be set on the plate). For higher control numbers press F2 (SET#+), for lower control numbers press F3 (SET#-). Move cursor to the desired position and confirm with ENTER.
- **Set samples:** Press F1 (SET TYPE) until "Sample" is marked. The sample number is displayed at the upper right of the screen. For higher sample numbers press F2 (SET#+), for lower sample numbers press F3 (SET#-). Move cursor to the desired position and confirm with ENTER. For automatic sample positioning press F4 (SAMPLE FILL). The vacant positions are filled with samples in the prescribed filling direction. If samples have been positioned manually, their numbers will no longer be used. To subsequently delete individual samples: press CE.

To delete all samples: press F4 (SAMPLE CLEAR).

Turn page with F5 (NEXT).

5.6 Report & Evaluation: Setting printout format, relational measurement calculation and setting the basic data for quantitative evaluation

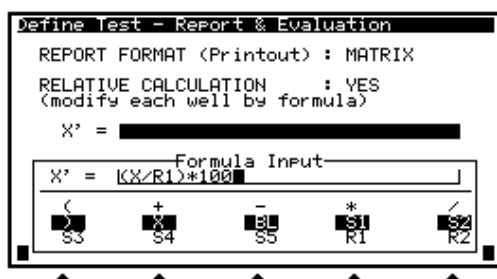

- **Report Format (Printout):** Matrix: Measurement printout for each plate position in 12 x 8 format. Mean value calculation of blanks, standards and controls only.
 - **Table:** Tabular printout of mean values, variation coefficients (deviations of individual replicates in percent), concentration values and classification groups of blanks, standards, controls and samples.
 - **Combined:** Printout of measurement positions (matrix format) with separate table for blanks, samples, standards and controls (table).
- **Relative calculation:** Setting all plate positions in relation to a predefined value. This value is calculated according to an algebraic formula which may contain all the standards, controls and blanks defined in the plate layout as well as the fundamental operations of arithmetic and numerical constants. Press CE to change the relative calculation to YES.

- **X'=:** Enter algebraic formula for the relative calculation. X' corresponds to the new value for each individual plate position. Press CE. The display menu shows all the standards, controls and blanks defined in the plate layout as well as a variable X. This variable represents all the original measurement values. It must appear exactly once in each algebraic formula. Move the cursor to select a row in the screen display and select the desired character with the corresponding function key. Numbers may be entered on the numerical keyboard.

Example: A negative control R1 that represents 100 % binding, has to be set in relation to all samples of the plate in order to deduce their amount of binding.

$$X' = (X/R1) * 100$$

Now the relational values correspond to percentage values showing the binding degree of each sample (B / B0 calculation).

- **Quantitative evaluation:** Method to obtain sample concentrations using a standard curve.
- **Number of standards:** Depending on the type of curve calculation, a minimum number of standards must be set:

Linear regression	2 standards
Point to point	2 standards
Cubic spline	3 standards
4 parameter fit	4 standards

Maximum number of standards: 12. Enter number on numerical keyboard and press ENTER. A quantitative evaluation can be performed independent of the standards defined in the layout.

- **Basis for quantification:** Appears only if „relative calculation = YES“ was selected. Set according to whether the original measurement values or the results of the relative calculation (relative values) are to be used for the quantitative evaluation.

Turn page with F5 - NEXT.

5.6.1 Standard points - definition of the concentration and OD-values of the individual standard points

Define Test - Standard Points		
#	Concentr. (x)	Response Value (y)
1	0.1	0.01
2	1	0.0001
3	10	0.00004
4	100	0.000004
5	1000	0.0000004
NEXT		

- **#:** Standard number. Only the number of standards set under „Report and Evaluation“ may be used for evaluation. The number of standards defined in the plate layout is not relevant for the actual number of standard points of a curve.

- **Concentration value (x):** Enter the concentration value to be plotted on the x-axis of the curve graphic. Constants of up to 12-digits may be entered on the numerical keyboard.
- **Response value (y):** Enter the absorption value to be plotted on the y-axis of the curve graphic. It usually corresponds to the OD-values of the standards on the plate, can, however also be defined by an algebraic formula containing all the set controls, standards and numerical constants.

Note: When entering the formula make sure that the sequence for the „response values“ is either ascending or descending. Press CE, move cursor to the row in the display menu with the desired character and confirm with the corresponding function key.

5.6.2 How to store a standard curve

Note: The use of stored standard curves is not generally recommended or applicable for the quantitative evaluation of ELISA's. It is explicitly the responsibility of the user to take advantage of the described software possibilities in the appropriate way!

Once a standard curve has been measured and OD results have been obtained (by programming for standard S1 the response value as S1, for the standard S2 as S2, etc.), the curve can be copied in the following way:

- Make a printout of the measured test containing both concentration values and OD values.
- Begin definitions of a new test.
- The layout need not contain a real standard anymore. As response values enter the OD values of the standards from the printout protocol of the measured test. Now a new plate can be measured that will be evaluated by means of the stored standard curve.

To be able to correct possible deviations of the curve, it is highly recommended to have at least one real standard on the plate by which a correction factor can be calculated.

Example: A plate with 5 standards is programmed:

	S1	S2	S3	S4	S5
Concentration Value	0.00001	0.0001	0.001	0.01	0.1
Response Value	S1	S2	S3	S4	S5

All the standards are put on the plate. The measured result for the response values are:


	S1	S2	S3	S4	S5
Response Value	0.3	0.6	0.8	0.9	1.1

A new test is programmed. Only standard S3 is physically on the plate and its measurement value will be the correction factor for all other standards.


	S1	S2	S3	S4	S5
Concentration Value	0.00001	0.0001	0.001	0.01	0.1
Response Value	$0.3 \cdot (S3/0.8)$	$0.6 \cdot (S3/0.8)$	$0.8 \cdot (S3/0.8)$	$0.9 \cdot (S3/0.8)$	$1.1 \cdot (S3/0.8)$

If the response value of standard S3 should deviate from 0.8, all other standards are corrected:


	S1	S2	S3	S4	S5	
Response für	0.32	0.64	0.85	0.96	1.06	erste neue Kurve
Response für	0.27	0.54	0.72	0.81	0.90	zweite neue Kurve

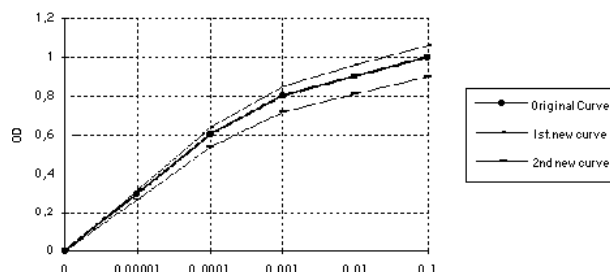

5.6.3 Quantitative evaluation - Settings for quantitative evaluations such as curve calculations, coordinate scaling, extrapolation, etc

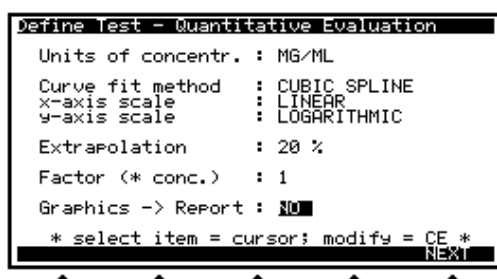


- **Units of concentration:** Definition of concentration units (e.g.: [mg/l]; important for the documentation on the printout. Press CE. The alphabet and a number of special characters appear in 6 rows and 5 columns in the display menu. Move cursor to the row with the desired character and confirm with the corresponding function key.
- **Curve fit method:** The following mathematical functions may be used to calculate the standard curve:
 - 1. Linear regression:** Construction of a straight line according to the least squares method with the highest possible approximation to all standard points. (Formula: $y = k \cdot x + d$) Minimum number of defined standard points: 2

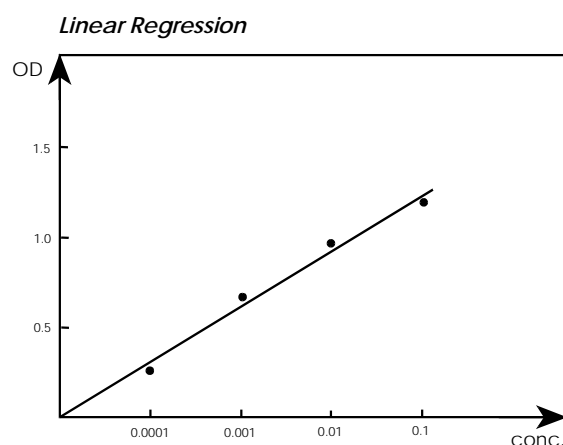


- 2. Point to point:** Direct connection of all standard points.
Minimum number of defined standard points: 2

Point to Point

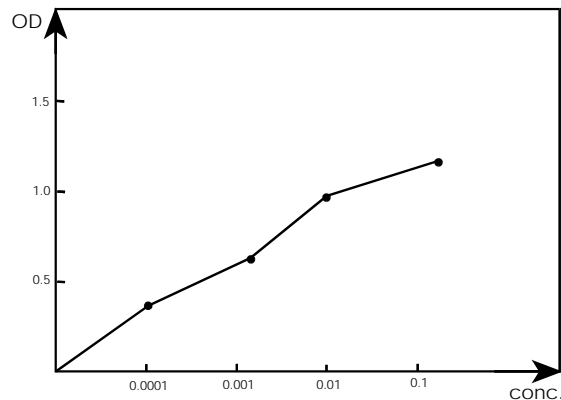

- 3. Cubic spline:** All standard points are connected by the best fitting curve. Can only be used for nonlinear and non-sigmoid functions.
Minimum number of defined standard points: 3


Cubic Spline

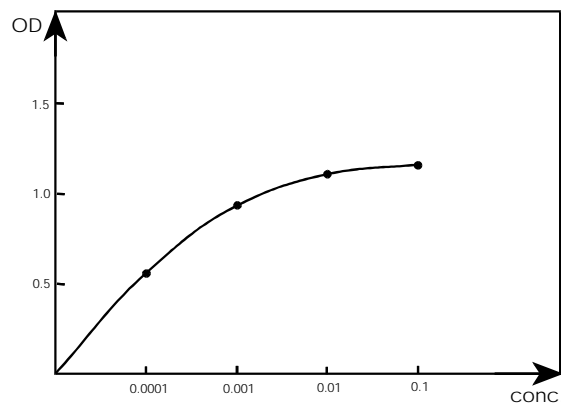

Definition of the "natural cubic spline" as found in: G. Engeln-Müllges, F. Reutter: "Formel-Sammlung für numerische Mathematik mit Pascal-Programmen", Bibliographical Institute, Mannheim, Vienna, Zurich; Wissenschaftsverlag, 1985; p.146 ff.

- 4. Parameter fit:** This procedure can only be used to characterize sigmoid curves.
Minimum number of defined standard points: 4
The curve is calculated according to the following formula:
 $y = \{(a-d) / [1 + (X/c)^b]\} + d$

4 Parameter Fit

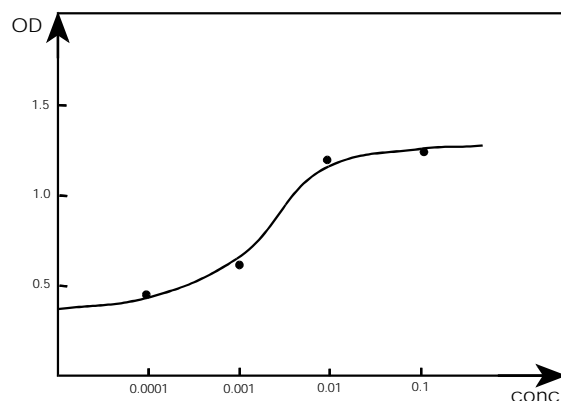

Definition: "The dose level which results in a response exactly half way between the zero dose response "a" (upper asymptote) and the infinite dose response "d" (lower asymptote) is designated as the "midrange" of the assay and is designated "c". ... In addition, the curve is characterized by a "slope factor" or "exponent", designated by "b"."

Definition according to "Radio-Immunoassay and Related Procedures in Medicine", International Atomic Energy Agency, Vienna, 1974, Volume 1, p.165 ff.

The axial scaling is preset in the 4-parameter fit and cannot be adjusted.

- **x-axis scale:** Scaling the x-axis (linear/logarithmic). Change with CE.
- **y-axis scale:** Scaling the y-axis (linear/logarithmic). Change with CE.
- **Minimum correlation:** Only valid for curve fit method = linear regression. Method to control a certain curve quality. Setting a divergence coefficient (between 1% and 99%) of the individual measurement points from the real curve to control a certain curve quality.

Best fit (= point lying on the curve) is 99. If the preset limit of individual points is exceeded, the respective warning appears on the printout.

Press CE, enter number between 1 and 99 on the numerical keyboard and confirm with ENTER.

- **Extrapolation:** The concentration of samples having a higher / lower measurement results than the highest / lowest standard can only be determined mathematically. A continued calculation of the curve can be performed up to 40 % outside the real curve fits.


This percentage corresponds to the concentration range between the lowest and highest standard (= 100 %). Extrapolated values are marked with an „x“ on the printout. If a curve loses its uniqueness in the extrapolation range (it reaches its maximum or minimum), extrapolation is blocked.

Press CE, enter a number between 0 and 40 on the numerical keyboard and confirm with ENTER.


- **Factor (* conc):** Select a multiplication factor of up to 10 digits. All concentration values of a plate can be displayed in a certain display range.
- **Graphics-report:** Set (Yes/NO) to determine whether a measurement printout should contain a standard curve graph or not.

Turn page with F5 - NEXT.

5.7 Qualitative interpretation - Set to classify samples according to programmable threshold values

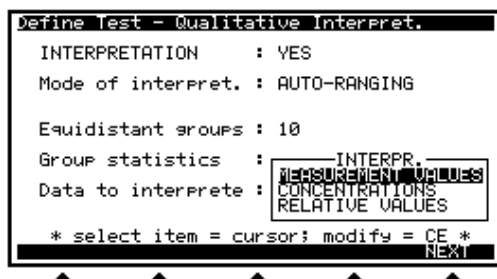

- **Interpretation:** If a qualitative evaluation of the samples is desired, press CE. The display changes from "NO" to "YES".
- **Mode of interpretation:** Set the type of threshold value subdivision
 - 1. Normal:** Up to 4 threshold (cutoffs) can be programmed individually and up to 5 ranges selected.
 - 2. Auto-ranging:** An upper and lower threshold are programmed in the next display menu. The intermediate range can be divided into 2 to 10 equidistant groups.
 - 3. %-ranging:** An upper and a lower tolerance value are programmed in the next display menu. The sample measurement values are printed also as percentages on the printout (the sample measurement values are scaled in percent).
- **Number of ranges:** Only appears for "mode of interpretation = normal". Enter the number of ranges to be subdivided (minimum = 2, maximum = 5)
- **Equidistant groups:** Only appears for "mode of interpretation = auto-ranging". Enter the number of equidistant tolerance value subdivisions (minimum = 2, maximum = 10).

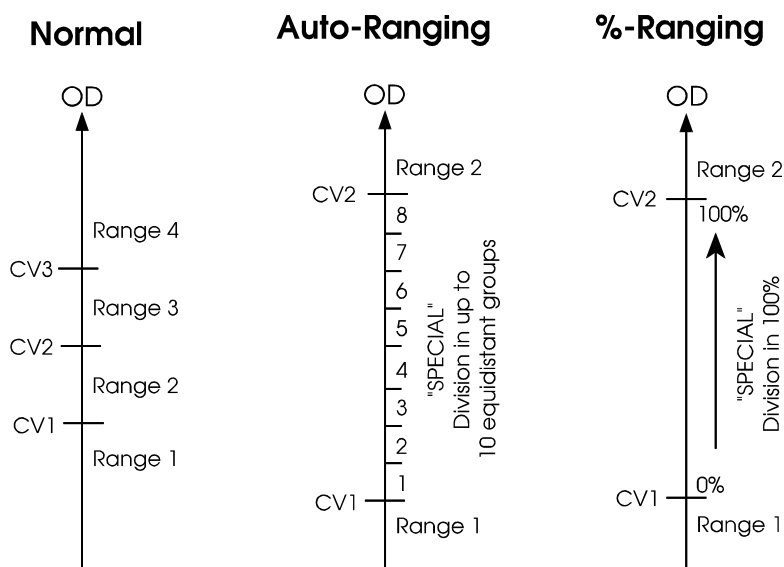

- **Group statistics (No/Yes):** The group division of measurement values and their correlations can be displayed statistically on the printout. Change to YES by pressing CE.

- **Data to interpret:** Only appears if quantitative and qualitative evaluations are combined. The measured data can also be displayed in concentrations and evaluated qualitatively as such by using the standard curve. If a relational calculation was programmed, these values can also constitute the calculation basis.

Turn page with F5 - NEXT.

5.7.1 Cutoffs and ranges - Setting the tolerance values and naming the ranges

- **Cutoff values for measurement results / concentration values / relational values:** Enter the formula or contents for the programmed tolerance values. (Normal: up to 4 cutoffs can be programmed / auto-ranging or %-ranging: two cutoffs must be programmed).

Press CE. All standards, controls and arithmetic functions which can be used in the cutoff-formula appear in the display menu. Enter numbers with the keyboard. Move the cursor to select a row in the display menu and confirm the desired character with the corresponding function key. Confirm complete formula by pressing ENTER.

Naming the groups defined by the preset cutoff values.

- **Range #1 ($x < CV1$):** All values falling in this range must be less than the first cutoff (CV). Press CE to display the alphabet in 6 rows and 5 columns. Move the cursor to select a row and confirm the desired character with the corresponding function key. Enter numbers with the keyboard. Confirm again by pressing ENTER. (etc.) If "mode of interpretation" = auto-ranging or %-ranging, the intermediate range between the two cutoff values cannot be individually named since either the group number or a percentage is automatically printed as the name. This range is referred to as "special".

Turn page with F5 - NEXT.

5.8 Control & test validation: Program to evaluate the control, standard and blank replicates and to automatically recognize and eliminate outliers


Press CE if an automatic replicate elimination and control/test validation is desired.

Turn page with F5 - NEXT.

5.8.1 Replicate elimination - Select the conditions for the automatic elimination of individual replicates

This function serves to eliminate individual replicates which do not fulfil a certain programmed condition. After the first elimination, the mean value of the remaining replicates is recalculated and the condition re-examined. If necessary, the elimination cycle is repeated. If a minimum number of replicates (to be determined) is still available in the end, the test is valid, if not, it is marked "invalid" on the printout.

If the mean value of the replicates remaining after an elimination constitutes the basis for the test evaluation, the necessary conditions are to be defined according to the next chapter: **5.8.2 Control validation - Condition to validate the mean value of standards, controls and blanks**

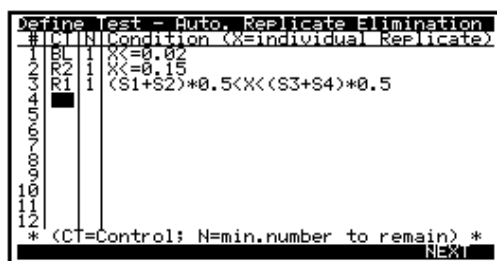

Program entries:

- **Column "CT":** Definition of the standard / control / or blank which is to be evaluated with the following condition. Press CE, select the corresponding position in the display menu with the function keys, confirm with ENTER.
- **Column "N":** Enter the minimum number of remaining replicates. Use keyboard for numerical entries and confirm with ENTER.
- **Column „Condition“:** Enter one or more conditions which must be fulfilled by each replicate to avoid elimination. Press CE, a display menu appears on the screen with the following character options for formula selection:
 - **all special positions** defined in the plate layout (standards, controls, blanks),
 - **arithmetic functions** (+, -, *, /, (), <, >, =),
 - **logical combinations** (NOT = true if condition is not fulfilled / AND = true if all conditions are fulfilled / OR = true if one of two conditions is fulfilled / XOR = true if none of the entered condition is fulfilled).
- **X** (represents each individual replicate of a certain control, blank or standard). Move cursor to select a row and confirm with the corresponding function key. Delete the last entry with CE. Finally reconfirm the formula with ENTER.

Application examples:

1. The absorption of a blank value may not exceed 0.020 OD
Formula: X <= 0.02
2. The absorption of the individual negative control value (R2) must be less than or equal to 0.150 OD, otherwise the

replicate must be eliminated.

Formula: $X \leq 0.15$

3. The deviation of the individual standard values of S1 may exceed the mean value of all standards of S1 by no more than 20 %.

Formula: $S1 * 0.8 < X < S1 * 1.2$

4. The absorption of the individual negative control values must be less than 0.2 OD. Furthermore, they may deviate from the mean value of all replicates by no more than 30 %.

Formula: $X < 0.2 \text{ AND } 0.7 * R1 < X < 1.3 * R2$

5. The absorption of the positive control R1 must be greater than the mean value of the first two standards (S1 / S2) and less than the mean value of the last two standards (S3 / S4).

Formula: $(S1+S2) * 0.5 < X < (S3+S4) * 0.5$

To turn page press F5 - NEXT.

5.8.2 Control validation - Condition to validate the mean value of standards, controls and blanks

If a programmed condition is not fulfilled, the entire test is marked "invalid".

Press CE. The following characters shall appear in the display menu:

- all special positions defined in the plate layout (standards, controls, blanks),
- arithmetic functions (+, -, *, /, (,), <, >, =),
- logical combinations (NOT = true if condition is not fulfilled / AND = true if all conditions are fulfilled / OR = true if one of two conditions is fulfilled / XOR = true if none of the entered condition is fulfilled).

Move cursor to select a row, confirm with the corresponding function key. Delete the last entry with CE. Finally reconfirm the formula with ENTER.



Application examples:

1. The test is only valid if the absorption value of the positive control R2 (i.e. the mean value of its replicates) is less than or equal to 0.8 OD.

Formula: $R2 \leq 0.8$

2. The test is only valid if both controls lie within the linear range of the photometer. (According to the specification, the linearity of READER 530 as of 0.1 OD is defined as +/- 1 % at 450 nm).

Formula: $R1 \geq 0.1 \text{ AND } R2 \geq 0.1$

The test validation is completed. Entries may still be modified by turning back the pages with PREV. Turn page with F5 - NEXT.

5.9 Safeguarding the test in the test memory

To safeguard the test just programmed in the test memory, press F2. The test is to be found in the test directory now. If the test is not to be stored, press F4 - NO. This display window does not permit turning back the pages with PREV.



6 Editing, printing and clearing of defined tests

6.1 Edit Test - Changing a test already programmed

- With the reader turned off:
- Turn on the reader.
- After completion of the self-test press F5 - EXIT; in the main menu press F5 - SETUP and then F1 - TEST.
- The screen will display a directory of all the programmed tests. Mark the test to be edited with the cursor.
- Confirm by pressing F2 - EDIT.
- With the reader turned on:
- Press STOP.
- The main menu will appear on the screen. Press F5 - SETUP and then F1 - TEST to display all tests already programmed.
- Mark the test to be edited with the cursor and confirm by pressing F2 - EDIT.

Screen display, input and delete functions of the Edit test are identical to test programming. Modifications will not be executed until the storage procedure has been carried out.

6.1.1 To copy a test

- Select the test to be copied in the test directory.
- The next display screen will show the parameters for the test identification. Select the test ID# (current identification number in the test memory) with the cursor.
- Press CE and enter a new (unused!) identification number for the test copy on the keyboard; confirm by pressing ENTER.
- If the test copy should not be stored under the same name, move the cursor to "Test Name", press CE, enter the new name and confirm with ENTER.
- Edit the copy and press F5 - NEXT up to the inquiry "Store changes - YES/NO". Press F2 - YES.

6.2 Print Test - Printout of all programmed test parameters

- Go to main menu with STOP.
- Check printer settings under System Setup.
- Press F5 - SETUP and then F1 - TEST.
- Use cursor to select the test whose parameters are to be printed.
- Turn on printer and press F3 - PRINT.

Printout: All parameters programmed for the test including plate layout, printing date and time will be printed.

6.3 Dir - Printout of the entire test directory

- Go to main menu with STOP.
- Check printer inputs under System Setup (F5 - SETUP, F3 - SYSTEM, F5 - NEXT),. return to main menu with STOP.
- Press in sequence F5 - SETUP, F1 - TEST and F4 - DIR.


Printout: All programmed tests including identification number, measurement and reference filters, measurement range, selected evaluation type (qualitative, quantitative, etc.) and test size in bytes will be printed. Depending on their complexity, at least 30 tests can be stored.

6.4 Clear - Erasing individual tests or the entire test memory

- Go to main menu with STOP.
- Press in sequence F5 - SETUP and F1 - TEST.
- Mark the test to be erased with the cursor and press F5 - CLEAR. Either erase the selected test with F1 - CLEAR or erase the entire test memory with F3 - CLEAR STORAGE.
- Return to the test directory with F5 - EXIT.

7 RUN TEST: Measuring a plate with a preprogrammed test

Go to the main menu with STOP. Press F2 - RUN TEST. All parameters needed to identify a test will appear on the screen.

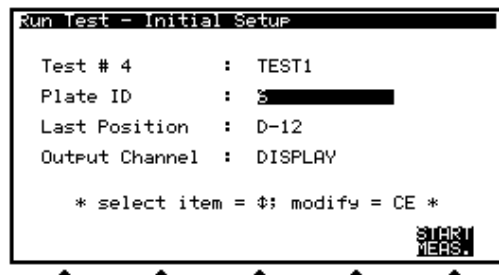

- **Test #xx:** Press CE, mark test in display screen with cursor and press ENTER. The stored test identification number will be searched for automatically.
- **Plate ID:** Enter a plate identification number which can consist of a combination of letters and numbers. The same plate identification number may not be given twice as long as the plate is in the plate memory. The default number is the next consecutive number after the last measured plate. Press CE and the alphabet will appear on the display screen in 5 rows and 6 columns. Select the row with the cursors and the column with the respective function key. Enter numbers with the keyboard. Confirm the entire identification number with ENTER.
- **Last Position:** If the entire plate has not been allocated, set the last used position on the plate, for which the measurement values are to be evaluated. Press CE and the microtitration plate pattern will appear on the screen. Move cursor to the desired position and confirm with ENTER.
- **Output - Channel:** Select the output channel after measuring.
 - **NONE:** The measurement values are immediately stored in the plate memory with the status „meas.“ (measured) and can be retrieved at any time.
 - **DISPLAY:** The data are displayed on the screen. They may be printed or transmitted afterwards.
 - **PRINTER, RS232:** Output of measurement values via printer or external computer.


Note: Check printer setup in Setup-System and turn printer on. Place the plate to be measured in the plate transport system.

Note: The plate position A01 must be in the upper left corner. The plate will not fit tightly in the transport system until measuring is started and the automatic centering is activated.

Press F5 - START MEASUREMENT. The plate is being measured.

For the output channel "DISPLAY" the results of the individual wells will be displayed on the screen. A printout will be necessary for the mean values of replicates.

The display of measurement data and plate layout is independent of the type of test.

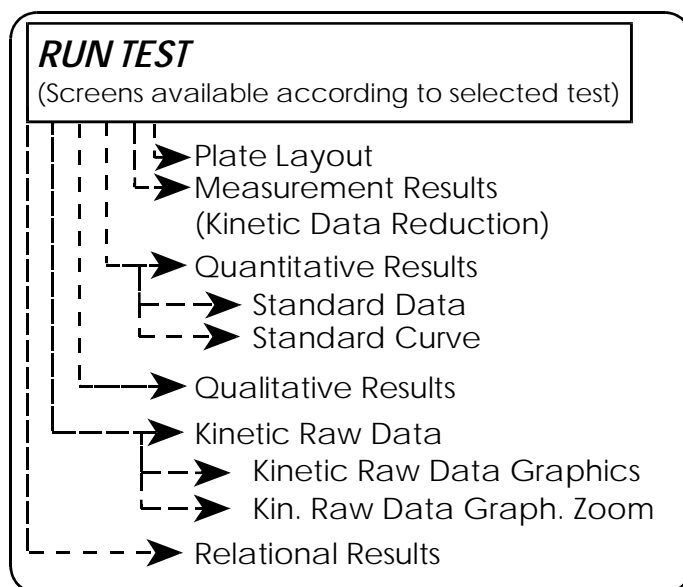

7.1 Measurement Results

Press F5 - SELECT SCREEN, move cursor to "Meas. Result", press ENTER. Only half of a plate can be displayed on the screen at one time. Switch to the other plate half with the cursors. For kinetic measurements, the values for the programmed data reduction will be displayed instead of measurement results in [OD].

Test: ES1		Plate: 1001				
OD: 450 nm [OD]						
	1	2	3	4	5	6
IGTMMOD	0.015	0.146	0.297	0.637	1.266	2.492
	0.012	0.171	0.308	0.632	1.257	2.470
	2.319	0.969	0.520	0.537	0.880	0.752
	1.151	0.957	0.527	0.542	0.879	0.752
* Plate: 0 *						
REPORT		TRANSMIT		REJECT		SELECT SCREEN

Function keys:


F1 - Report: Printout of measurement data, evaluation results and plate layouts. This function is also available in other program sections.

F2 - Transmit: Transmission of measurement data to an external computer. This function is also available in other program sections.

F3 - Reject: Deleting measurement values that are not to be included in the calculation (can be revoked). Press CE to display a plate matrix on the screen. Move the cursors to select the well whose measurement value is to be deleted and confirm with F4 - SELECT. If previously marked well is to be included in the computation again, move the cursor to the desired position and press F2 - CLEAR (or F1 - CLEAR ALL). Confirm with ENTER.

F5 - SELECT SCREEN: Depending on the programmed evaluation methods, different ways of displaying the results are available. This function is available for all other program sections of this submenu.

7.2 Plate Layout

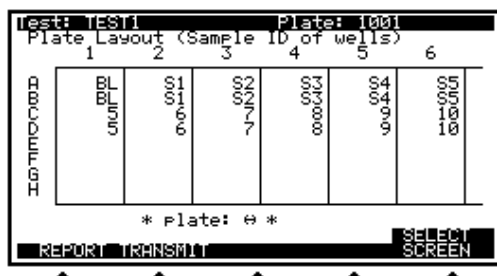

The plate layout with all special positions (blanks, standards, controls) and the numbered samples set in selected test are shown on the display.

Function keys:

F1 - REPORT


F2 - TRANSMIT

F5 - SELECT SCREEN

7.3 Quantitative displays

For the test results of a quantitative evaluation the standard curve is always displayed first. Its computation may take a few minutes (above all in the case of the 4-parameter fit). A counter on the display shows that the reader is still working.

7.3.1 Standard Curve

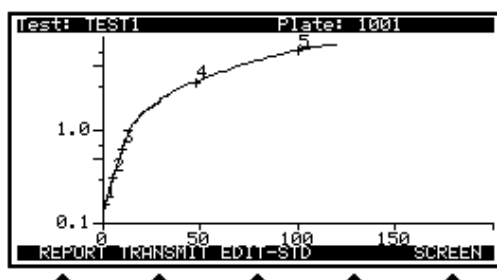

First the curve is computed according to the programmed Curve Fit Mode and displayed on the screen. In the case of a linear regression, the calculation limits for the measurement values are established by the calculated straight line. Thus concentration values can be displayed as "<Minimum" although they are greater than the programmed minimum concentration.

Example:

Standard point 1:

Concentration: 100;

Response Formula: $(S1+S2) / 2$;

linear regression

Evaluation:

Interpolated concentration value of the standard point 1: 113,
last point of regression line ends at Conc = 120,
thus: $S1 = <120$.

Function keys:**F1 - Report****F2 - Transmit****F4 - Edit Standard:** Switch to screen display "Standard Data"**F5 - Select Screen**

7.3.2 Standard Data

Display of all standard data:

Test: 1501		Plate: 1001		
Curve Fit Method: CUBIC SPLINE		Y-axis = LOGARITH		
X-axis = LINEAR				
#	Concent.	Resp. Formula	Response	InterPol
1	1	S1	0.159	1
2	5	S2	0.303	5
3	10	S3	0.634	10
4	50	S4	1.2615	50
5	100	S5	2.481	100

EDIT
FIT
CURVE
RECALC
SCREEN

- Concentration (programmed concentration)
- Response formula (calculation formula for standard point)
- Response (measured OD-value)
- Interpolation (real concentration value of the standard center point).
- Depending on the selected curve calculation method, slope, offset of regression line from the zero-point of the x-axis (y-int), average deviation of the standard points from the curve (correlation) - this value is between 0 and 1 (the best curve fit quality is "1") and the axis scaling are also displayed.

Function keys:

F1 - Edit: All replicates of the standard previously selected with the cursor keys are displayed. Standards can be removed from the calculation manually. Move cursor to the desired position and press CE. Renewed pressing of CE would include the replicate in the calculation again.

F2 - Fit: Modifying the curve calculation method and the axis scaling.

F3 - Curve: Switching the display screen to "Standard Curve"

F4 - Recalc: Recalculation of the test. If test parameters have been modified, this will be performed automatically upon switching the display screen.

F5 - Select Screen: Choice of all available display screens.

7.4 Quantitative Results

Display of real concentration values for all plate positions. Blanks are marked "-". Concentration values less or greater than the calculated minimum or maximum value, respectively are marked "<" or ">" if no extrapolation value was programmed. Extrapolated values are marked with an "x" in front of the value. Instead of automatically eliminated values, "A-REJ" (auto-rejected) is displayed.

Function keys:

F1 – Report

F2 – Transmit

F5 – Select Screen

7.5 Qualitative Results

Test: TEST1			Plate: 1001		
Qualitative Results - Interpretation					
	1	2	3	4	5
IGT	-	-	2	6	+
GT	+	9	2	+	+
MT			4	0	7
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					
LT					
FT					
BT					
RT					

7.6.2 Graphics 8/12

Display of the reaction course of all wells according to the limits set in the test program ("Online Graphic Kinetic Parameters")

Function keys:

F1 - Print: Printout of all graphics for a certain plate.

F2 - Col/Row: Choice of column or row of graphics to be displayed. Move cursor to desired position and press ENTER.

F3 - Limits: Change of set display range (OD Range, Reaction: increasing/decreasing)

F4 - Zoom: Enlarging graphic display of marked well.

F5 - Select Screen

7.6.3 Zoomed Graphics

Enlarged graphic display of selected plate position.

Function keys:

F1 - Print: Printout of enlarged graphic

F3 - Zoom out: Graphic display of the entire row or column

F5 - Select Screen

7.7 Relational Results

If the option "relational calculation" has been selected in the test definition, this screen is available in any case, independent of the programmed evaluation methods. The results have been calculated according to the programmed formula.

Function keys:

F1 - Report

F2 - Transmit

F5 - Select Screen

8 PLATES: Plate memory, re-evaluation of plates without measuring, printout or view of measurement and evaluation data

After each measurement with a preprogrammed test, all measurement and evaluation data, all test parameters and the plate identification number are stored in the plate memory. It can permanently store the data of up to 10 plates. If the memory is full, the respective error message will be displayed on the screen.

Plates Recall Menu			
#	Plate ID #	Test# - Testname	Stat.
1	8	1-ELISH	meas.
2	9	3-STANDARD1	meas.
3	1000	4-TEST1	eval.

* select test = cursor; storage = enter *

VIEW	REPORT	TRANSM	RE-EVAL	CLEAR
------	--------	--------	---------	-------

#: Number of the plate in the memory, consecutive from 1 to 10

Plate ID#: Plate identification number (combination of letters also possible). It is entered prior to the measurement in the menu "Run Test". The incremental number of the last measured test is preset.

Test# - Test name: Identification name of the measured test with the corresponding test number (is programmed in the menu "Test Definition").

Stat.: Status display. There are three types of plate status:

1. measured (meas.): The plate was measured but the measured data have not been printed yet. These plates have the highest priority in the memory mode "Shift" and cannot be automatically deleted.

2. evaluated (eval.): The data of these plates were printed. In the shift mode they are automatically deleted consecutively from the plate memory as needed.

3. special kinetic (s-kin): A special two point kinetic has been programmed, the first cycle has already been measured and it is stored under this status in the plate memory. Right when the second cycle has been measured, the two halves are set together and the plate gets the status "meas" or "eval".

Note: If no plate is to be deleted automatically, the plate storage mode must be switched to PROTECT in the system setup.

Selection of plate with cursors.

Function keys:

F1 - View: All available results for this plate are displayed on the screen. The data may also be printed or transmitted to an external computer. This submenu is identical to the menu appearing after completion of a measurement (Run-Test) under "Output channel = Display".

F2 - Report: Printout of a report in the matrix, table or combined format (depending on the test program setting).

F3 - Transmit: Transmission of measurement values to an external computer.

F4 - Re-eval: Repeated evaluation of the raw plate data without measurement. This function makes it possible to have the measurement values of a plate evaluated with another test or to have two or more tests performed on one plate. If a plate is to be evaluated with a new test, make sure the setting of blanks, controls, standards and replicate numbers, etc. conform with the layout programmed for the new test.

This function is normally used to edit small programming errors in the test and to have the plate data re-evaluated without having to remeasure the entire plate. Move cursor to mark the plate to be re-evaluated, press F4 - Re-eval, press CE to select a new test from the display screen and confirm with ENTER. Set the last position to be measured on the plate under "Last Position" and select an output channel.

Press F5 - START EVAL. After the plate has been evaluated, the data can either be displayed on the screen, printed or transmitted to an external computer. In the plate memory, the plate will remain linked to its original test.

F5 - Clear: To erase individual plates or the entire plate memory.

Note: Make sure printouts are available before starting to erase.

Move cursor to the plate to be erased, press:

F5 - CLEAR: To erase a preselected plate,

F1 - CLEAR ID#: to erase the entire memory

F3 - CLEAR STORAGE

F5 - EXIT: to abort

9 Error messages

9.1 Error messages in the display

A

ABORTED BY USER STOP KEY PRESSED: is displayed when a measurement was aborted by pressing the STOP key.

ABORTED BY USER REMOTE CONTROL <STOP>: is displayed when a measurement was aborted by an external command.

A/D CONVERTER TIMEOUT!: The AD converter (or one of its driver modules) on the ADC Board is defective. Call a service technician.

A/D CONVERTER TOO SLOW: The AD converter (or one of its driver modules) on the ADC Board is defective. Call a service technician.

ALL DATA IN PLATE STORAGE WILL BE LOST: is displayed when the entire plate memory is to be erased. (PLATES-CLEAR - CLEAR STORAGE). Erase entire memory irreversibly by pressing F2 - CONTINUE or return to the plate directory by pressing F4 - EXIT.

AUTO REPLICATES AND AG-CONTROL STRIPS CANNOT BE COMBINED: is displayed if both functions were selected in the test program or test edit. Plate calculation must be performed by means of an automatic layout function, whereas the second function can be simulated manually in the menu "Setup Template".

B

BARCODE READ ERROR: is displayed if the barcode was set to "YES" in the device's setup, a measurement was started in the menu "Run Test", but the barcode label for the plate identification cannot be read. Check if the plate in the plate transport has a barcode, if the label has been properly attached and if the hardware for an internal barcode reader has actually been installed. Only the following high density codes can be read: EAN8 / EAN13 / CODABAR / CODE-39 / UPC-A / UPC-E / INTERLEAVED 2/5 / CODE 128 (only on special request).

Either restart with F2 - REPEAT, enter the plate identification number manually with F3 - MANUAL INPUT or return to the main menu with F4 - SKIP.

C

CONTROL MEASUREMENTS WRONG (MIN/CAL/MAX VALUES)!: signifies an error during a measurement in the extended range. Check the filter inputs, the diode values of the lamp block and the cleanliness of the grey glass at the end of the plate transport. If the error recurs, call a service technician.

CUTOFF FORMULA MUST BE DEFINED!: is displayed if a certain number of cutoffs was programmed for the qualitative interpretation but no valid cutoff constants or formulas were programmed. Refer to the chapter "Test Definition - Qualitative Evaluation".

D

DEVICE NOT READY: Upon being activated externally, the computer does not send a „Clear to send“ - (CTS) signal. Check hardware connections (cable) and the computer's ready to receive state.

DO NOT USE BLANKS IN THIS FORMULA!: Blanks can only be used in formula calculations if their range of validity has been defined for the entire plate in the screen „Plate Layout“ (Blank Validity = Plate).

E

EXTENDED RANGE IS NOT ALLOWED FOR 340 - 400 NM FILTER!: is displayed if a filter under 400 nm is used in the extended range. Either change to normal range or program another filter.

EXIT WILL QUIT PROGRAMMING WITHOUT SAVING THE TEST!: is displayed if PREV is pressed in an attempt to enter the test directory during a test definition or test edit. The test editor will remain active by pressing F2 - CONTINUE; the test definition will be discontinued by pressing F4 - EXIT; modifications or any other inputs made will not be stored.

F

FILTER HOME POSITION NOT REACHED!: is displayed if the filter case does not reach its home position for mechanical reasons. Possible source: the transport system is caught, the optical sensor which recognizes the case is disaligned or defective. In any case, call a service technician.

FILTER WITH SELECTED WAVELENGTH IS NOT INSTALLED!: The selected wavelength is no longer installed in the device's setup. Also check the correct positioning in the filter case when reprogramming,

I

INTERNAL BARCODE READER: Communication error between the internal barcode reader and the reader. Check data format and other setup inputs on the Barcode Board.

INTERVAL TIME TOO SHORT FOR DEFINED MEASUREMENT: For the minimum time interval setting refer to the drawing in the handbook "Factor Dilution & Kinetic Measurement".

INCOMPLETE RESULTS! CONTINUE EVALUATION?: This warning is displayed when a kinetic measurement was aborted before all measurement cycles could be completed. The evaluation can either be aborted or continued with the incomplete data.

L

LAMP HIGH - CALIBRATION FILTER: Calibration filter measurements in the extended range are too high. Measurements in the normal range are possible. Check the calibration glass at the rear left edge of the plate case for mechanical damage. Call a service technician.

LAMP HIGH - MAXIMUM DETECTION: The lamp power on the detector is too high to be able to perform a precise measurement. Print the diode values as described in the chapter "Maintenance", check the installed filter and its program in the setup; if necessary, the filter and the lamp block must be replaced (call a service technician).

LAMP HIGH - MINIMUM DETECTION: During a calibration measurement, the maximum darkness value has been exceeded. This can either be due to outside light (open device) or to dis-adjustments on the ADC board (amplifier offset). Print the diode values as described in the chapter "Maintenance" and call a service technician.

LAMP LOW - CALIBRATION FILTER: The values obtained during calibration filter measurements in the extended range are too low. Measurements in the normal range are possible. Check the calibration glass on the left rear edge of the plate case for dirt collection and streaks. Clean as well as possible. Call a service technician.

LAMP LOW - MAXIMUM DETECTION: The lamp power on the detector is too low to be able to perform a precise measurement. Print the diode values as described in the chapter "Maintenance", check the installed filter and its program in the setup; if necessary, the filter and the lamp block must be replaced. Call a service technician. Check the optical system for dirt collection, liquid residues, particles, etc.

LAMP LOW - MINIMUM DETECTION: During a calibration measurement, the minimum darkness value has not been attained. This is usually due to dis-adjustments on the ADC board (amplifier offset, detector diodes) and can only be rectified by a service technician.

LAYOUT PARAMETERS MODIFIED! CONTINUE WILL CLEAR TEMPLATE!: is displayed when the automatic plate layout functions are to be modified during a test edit. This also involves a new, individual plate layout. Press F2 to delete the previous plate layout; press F4 - EXIT to discontinue the modification attempt.

M

MEASUREMENT NOT POSSIBLE - TRANSPORT SYSTEM NOT INITIALIZED: occurs when the plate transport could not initialize properly. If this message recurs after repeated attempts to start (or self-tests in the service menu), store all test parameters and tests already measured. No further measurements can be performed. Call a service technician.

N

NO DEFINED TEST IS AVAILABLE! TEST DEFINITION IN SETUP/TESTS: is displayed when a plate is to be measured in the Run-Test menu but the test memory in the menu Setup/Tests is empty. See test programming in the chapter "Define-Tests".

NO SAMPLE SET ON PLATE! EXIT WILL GIVE YOU ANOTHER CHANCE!: This warning is displayed, if no samples were set on the plate during test programming. Press F2 - CONTINUE to ignore the warning.

NOT ALL FILTERS HAVE BEEN DEFINED: is displayed if a certain number of filters to be measured was set in the Quick menu Multi, but not all were allocated a corresponding wavelength. Set the number of filters to the correct amount.

NOT ENOUGH MEMORY - HEAP OVERFLOW: only occurs for internal software problems, i.e. after program dumping. If the message recurs after repeated attempts to initialize the device, print all programmed tests and plates already measured and call a service technician to replace the software.

NOT ENOUGH MEMORY - PLEASE CLEAR TEST(S): The device's test memory is equipped with a dynamic memory structure, so that although at least 30 tests can be programmed, a maximum capacity cannot be defined. The remaining memory available is displayed in the menu Setup/Test on the lower edge of the screen (Memory used: xxxx bytes). When this error message is displayed, the remaining memory is not sufficient for a new test definition. After printing the test parameters, erase one or more tests (move cursor to mark desired test, press F5 - CLEAR, confirm with F1 - ID# xxx).

NOT ENOUGH STANDARDS DEFINED FOR THIS CURVE FIT METHOD!: The minimum number of standard points for various curve evaluation methods: linear regression: 2 points; point to point: 2 points; cubic spline: 3 points; 4-parameter fit: 4 points (refer to the chapter 5.5 "Report & Evaluation").

NO PLATE DETECTED: No microtitration plate was detected in the plate transport. Insert a plate and start again. If this error message occurs frequently for no apparent reason, inform a service technician.

NO TEST WITH THE SELECTED ID NUMBER IS AVAILABLE: appears when a test was selected with a test identification number for which no defined test is yet available in the Run Test menu. Press ENTER, move the cursor to the right on the test name and press CE. A list of all the programmed tests with the corresponding identification number will appear. Set the cursor to the desired test and press ENTER.

NO WELL POSITIONS SET FOR MONITORING: During test programming at least one plate position, whose value is to be compared with the defined parameters, must be selected in the Monitoring Mode. Go to "Well positions", press CE and select the desired position on the plate matrix displayed on the screen.

O

OD UPPER LIMIT MUST BE HIGHER THAN LOWER LIMIT: appears when the wrong limit was set for either the monitoring mode or for the kinetic data reduction (Delta t absolute) during test programming. The correct OD range must always be defined by a higher (=upper) limit and a lower limit".

P

PLATE DATA IS CORRUPTED - CANNOT BE LOADED: The plate data cannot be loaded due to a checksum error in the device's memory module (program dumping). If the error recurs after repeated attempts to initialize the reader, please measure new plate. Turn off device; after 1 hour, check if the complete data are still available. If not, replace batteries after incomplete plate memory was printed (see chapter "Maintenance") and erase entire memory. If the error occurs again, call a service technician.

PLATE HOME POSITION NOT REACHED: appears when the plate carriage does not reach its initial position on the right side of the transport system. Check if transport is hindered for mechanical reasons (sticky or bent guide bars). Otherwise, call service technician (to check the home position sensor of the plate transport system and the positioning of the reflex strip).

PLATE STORAGE IS FULL: The plate memory can store up to 10 plates including measurement data. If the "SHIFT" type of memory was selected under Setup, the evaluated plates will be erased from the memory automatically. If not (type of memory "PROTECT"), the plate memory must be erased in part or completely from time to time after the data has been printed. This also applies if only those plates whose status is "measured" remain in the memory.

PLATE TRANSPORT INITIALIZATION: is displayed if the connection to the device's lamp block is interrupted for

hardware or software reasons. In any case, call a service technician (to check cable connections, temperature shut down board and lamp block for proper functioning).

PLATE WITH SELECTED ID NUMBER EXISTS ALREADY: is displayed if a plate identification number is selected in the Run Test menu, that has already been allocated to a previous test. For an unequivocal allocation it is absolutely necessary to assign an individual number to each plate in the plate memory which is to be measured. Press ENTER and set a new ID#. The display is automatically preset to the next consecutive identification number.

PRINTER NOT READY: Turn on printer, check that there is enough paper in the paper feed and check for proper functioning.

R

REFERENCE CHANNEL TOO LOW!: The values of the lamp block's reference channel are too low. Print the diode values as described in the chapter "Maintenance". Measurements in the normal measurement range can usually be performed without error. Nevertheless, inform a service technician.

S

SELECTED TEST CONTAINS INVALID DATA: The contents of the selected test are incomplete or invalid due to errors in the device's internal memory components (checksum error). Nevertheless, try to print the test parameters. If only one test is affected by this error message, do not erase, otherwise the defective memory area could spread to other tests.

SERIAL COMMUNICATION: The device is having trouble in serial communication with a computer. Check if the baud rate, parity bit and data format conform in both devices (data is received with frame or overflow errors).

SERIAL COMMUNICATION - BUFFER FULL: The maximum length of the data string sent by the computer may not exceed 192 bytes.

SHAKING DURATION TOO LONG FOR DEFINED MEASUREMENT: Either the shaking duration must be shortened or the interval time extended. See drawing "Minimum interval time" in chapter "Factor dilution & kinetic measurement".

T

TRANSPORT STEPS LOST: The measurement value evaluation on the microtitration plate is defined by a certain number of steps. Steps can be lost due to an inaccurate plate transport and a plate evaluation is no longer possible. If the error message recurs, call a service technician.

W

WRONG X DEFINED - CANNOT USE X!: (*) The formula in the validation part of the test definition must not contain an "X" (incomplete erasing of XOR)

WRONG X DEFINED - MUST BE USED ONCE!: A formula must be entered for the evaluation of relational values in the test definition, in which the variable X (representing all samples, controls, standards and blanks on the plate) occurs exactly once. This is necessary to limit the relational calculation to a linear model. Also refer to the chapter "Report & Evaluation".

WRONG X DEFINED - YOU MUST USE X!: (*) For the automatic elimination of replicates in the test definition, a formula must be defined for each control, each blank and each standard to be evaluated, in which the variable X (represents the individual replicate of the control / the standard / the blank) must be used at least once.

9.2 Error messages and warnings in the printout

ERROR: CALCULATION OF RELATIONAL FACTOR NOT POSSIBLE!: The relational factor is calculated with a formula programmed in the test definition. If an element of such formula becomes invalid after completion of the replicate elimination or test validation, etc. (e.g. S1 was "rejected" or R1 is "overflow"), no relational factor can be calculated.

ERROR: INTERPRETATION NOT POSSIBLE: No qualitative evaluation can be performed. This error message occurs if the values of the cutoffs are not in ascending order or if the cutoff formula cannot be calculated at all (e.g. since an element in the formula is nonexistent, overflow, rejected, etc.).

ERROR: INVALID CURVE SHAPE: is displayed if the standard curve cannot be calculated unequivocally. Possible remedy: Select another curve fit mode.

ERROR: NO BLANK SUBTRACTION POSSIBLE: If all replicates of a certain blank are faulty (overflow, invalid), a blank subtraction is no longer possible. No evaluation takes place; the test is invalid.

ERROR: QUANTITATIVE EVALUATION - MORE STANDARD POINTS REQUIRED: The minimum number of standard points depends on the selected curve fit mode. If not enough points were defined in the test definition or if plate evaluation points are lost (rejected, overflow, auto-eliminated), the curve can no longer be evaluated. Possible remedy: repeat the test or select another curve fit mode (also refer to the chapter „Report & Evaluation“).

ERROR: QUANTITATIVE EVALUATION - INVALID CURVE DATA: A standard curve calculation is no longer possible.

Neither standard curves nor concentration values can be obtained. Find error by means of the printout.

ERROR: QUANTITATIVE EVALUATION - INVALID POINT SEQUENCE: The points of the standard curve are not available in an uninterrupted ascending or descending order. No concentration calculation is performed. Find error by means of the printout. Try to re-evaluate after eliminating the standard "outlier" or re-evaluation after defining the test without including the faulty standard in the curve calculation.

ERROR: TEST INVALID - AUTO REPLICATE ELIMINATION: (*) Due to the auto-elimination the minimum number of replicates for (at least) one standard, one control or one blank was not attained. The test is considered invalid, although an attempt to evaluate was made.

ERROR: TEST INVALID (CONTROL VALIDATION)!!: (*) The test becomes invalid since a condition for control validation was not fulfilled. An attempt to evaluate is made nevertheless. Find error by means of the printout..

WARNING: BLANK STATUS!: At least one replicate of a blank is faulty (overflow / rejected / invalid / auto-eliminated). The test is evaluated. A check of the printout is recommended.


WARNING: CONTROL STATUS!: At least one replicate of a control is faulty (overflow / rejected / invalid / auto-eliminated). The test is evaluated. A check of the printout is recommended.

WARNING: STANDARD STATUS!: At least one replicate of a standard is faulty (overflow / rejected / invalid / auto-eliminated). The test is evaluated. A check of the printout is recommended.

WARNING: QUANTITATIVE EVALUATION - COEFFICIENT OF CORRELATION TOO LOW: The correlation coefficient has been defined as a measure for the fit of the individual standard points in the calculation mode of the linear regression lines. The best curve fit is defined as 99% (points lying on the line). In the test definition "Quantitative Evaluation" a minimum coefficient was defined, which falls short of the previously run test. A possible remedy is to strike out replicate outliers manually (if no automatic replicate elimination or an insufficient automatic replicate elimination was programmed).

10 Communication between the HT1/2/3 and an external computer

The serial interface is specified according to the CCITT and the EIA RS232-C interface standard. The following is a description of the pin configuration and the signals to be transmitted.

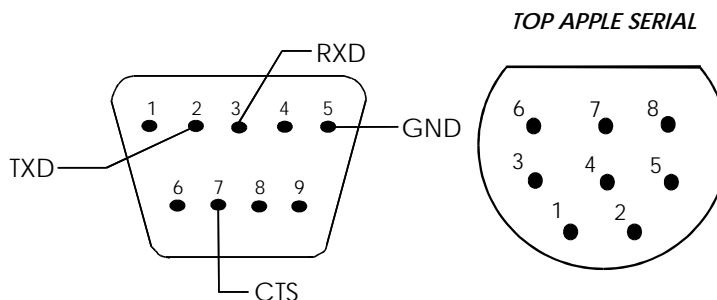


DB-9 connector plug -pin configuration

Signal level:

The range from +3V to +12V corresponds to space (logical "0") for data signals and "ON" (logical "1") for control signals. The range from -3V to -12V corresponds to a mark (logical "1") for data signals and "OFF" (logical "0") for control signals.

The serial RS232-C interface and the Sub MIN D9 socket used for the HT1/2/3 correspond to the PC-AT personal computers.

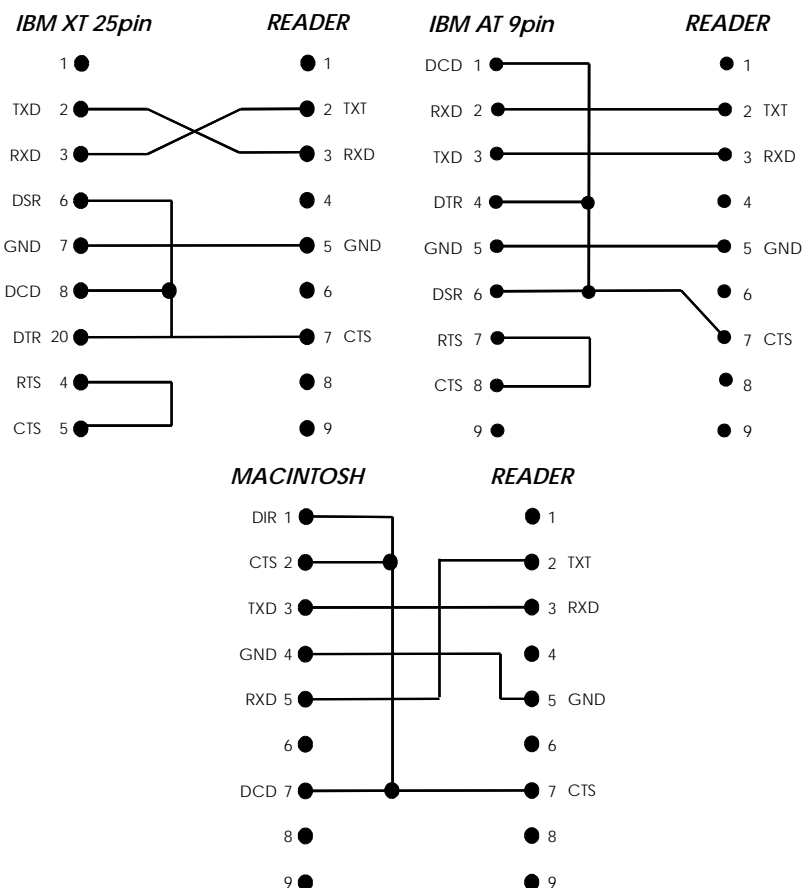

Transmission format:

- 1 start bit
- 2 stop bit
- 8 data bits
- even parity

The data transmission rate can be adjusted from 300 to 19200 baud (normal setting = 9600 baud) in the submenu SETUP/SYSTEM (press F5 in the main menu, then F3 and F5-NEXT).

A precondition for the serial communication with an external computer is a terminal program which is able to receive data transmitted in the ASCII format. The communication can begin as soon as the computer software is installed, the serial cable connected, the device setup correctly configured and the Reader in the standby mode (display in the main menu). The Reader's display shows the current transmission status (e.g. data transfer, etc.), does not, however, indicate the remote controlled status. Communication can be discontinued by pressing the STOP key.

10.1 Principles of the communication process

All transmissions, including the acknowledgement signal, begin with ASCII STX (start of text, hex 02) and end with ETX (end of text, hex 03).

- 1. Receipt of command:** a command string defined by a command key with a maximum length of 192 bytes is sent to the Reader.
- 2. Transmission of answer:** an answer string with checksum (Cxx) is sent to the computer. Either a successful command transmission is acknowledged (ack = +) or a transmission error message is displayed (nack = -).


Transmission errors can have the following reasons:

The Reader did not recognize the command, the parameters were not completely transmitted, the parameters were not within the specified range, etc.

Example:

STX + Cxx ETX	Positive acknowledgement
STX - Cxx ETX	Negative acknowledgement

- 3. Execution of process** (measurements, access to Reader data,...): Only if the command received a positive acknowledgement.

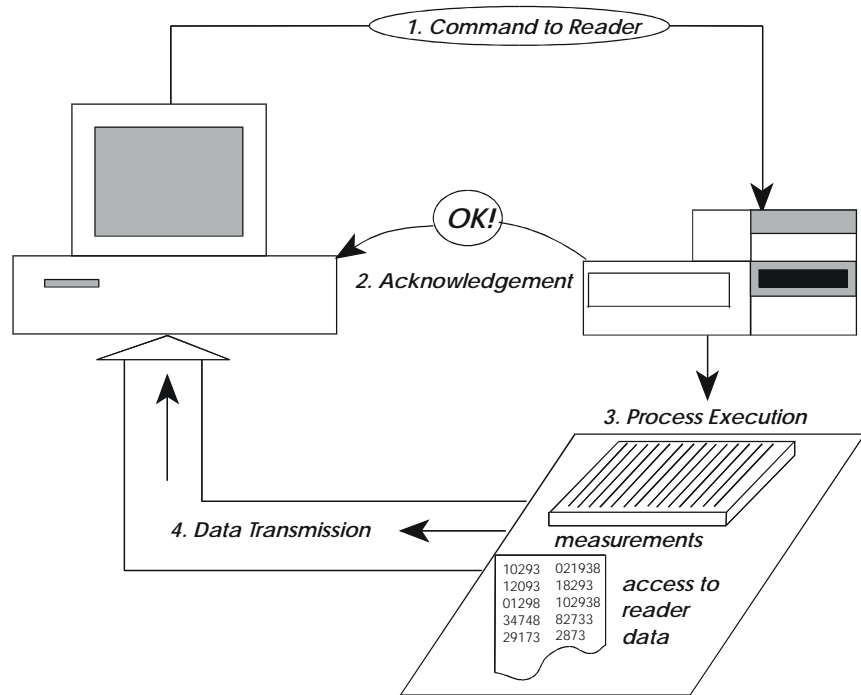

4. Transmission of result data: After the specified process was successfully concluded in the Reader, the results are transmitted to the computer as defined. In case of an error, an error message is transmitted (message key = "E").

10.2 Command keys

1. **"V"** - display of software version installed
2. **"F"** - display of filters installed in setup
3. **"N"** - normal measurement (also possible with several wavelengths)
4. **"D"** - bichromatic measurement (measurement and reference wavelengths)
5. **"M"** - transmission of 35 transmission values per well (agglutination and scan measurements)
6. **"A"** - agglutination measurement with adjustable number of well positions to be transmitted (0 - 31)
7. **"K"** - kinetic measurement combined with shaking function
8. **"PD"** - transmission of plate directory (plate identification numbers, tests, status of individual plates)
9. **"PR"** - transmission of the evaluated results of a specific plate in the plate memory
10. **"TD"** - transmission of the test directory (all tests defined in the test memory)
11. **"TR"** - measurement of a plate according to the parameters specified for a certain test in the Reader, evaluation of results and transmission
12. **"H"** - shaking
13. **"R"** - repeat of the last data transmission (only possible if no other remote control or stand-alone command has been executed in the mean time)
14. **"B"** - transfer of the plate identification number via barcode reader

15. "?" - setup information (transfer of type of device, software version, installed filters, barcode reader status and temperature control status)

If measurements are to be performed in the extended measurement range (display range = 0 - 3.5 OD), the letter "h" (high range) will be inserted after of the command character.

Example: STX, Kh 450 15 20 H 2 5", ETX

(kinetic measurement in the extended measurement range, 450 mm measurement filter, 15 seconds time interval, 20 measurement cycles with interval shaking of medium intensity, shaking duration = 5 seconds).

10.3 Generation and transmission of checksum

The checksum is only transmitted from the Reader to the computer and not vice versa. If it contains an error, the last data string transmission can be repeated by using the "R" command. The next command cannot be carried out until all data have been received.

Example: data string = 12345

1 [char] = 31 [hex] = 0011 0001
 2 [char] = 32 [hex] = 0011 0010
 3 [char] = 33 [hex] = 0011 0011
 4 [char] = 34 [hex] = 0011 0100
 5 [char] = 35 [hex] = 0011 0101
 0011 0001 = XOR-logic


Transmission of the checksum in the ASCII code:

0100 (defined supplement) plus 0011 (checksum, first part)
 —> 0100 0011 = 43 [hex] = **C** [char]

0100 (defined supplement) plus 0001 (checksum, second part)
 —> 0100 0001 = 41 [hex] = **A** [char]

Thus, the resulting checksum is "CA"

Thus, the transmitted string is: **STX 12345 CCA ETX**

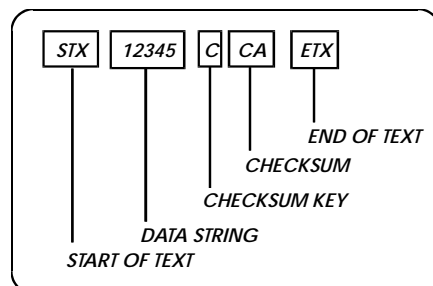

Together with the setting of the parity bit (device setup), this type of error control is so efficient that only a 4-fold symmetrical bit error would cause an undiscovered transmission error.

10.4 Description of commands

10.4.1 "V" - transmission of software version number

Command string to the Reader: **STX V ETX**

Answer string to the computer (example):

STX Anthos Labtec HT2 Version 1.22 E Cxx ETX

10.4.2 "F" - transmission of filters installed in setup

Command string to the Reader: **STX F ETX**

Answer string to the computer (example):

STX 620 540 492 450 405 340 Cxx ETX

Up to eight filter values can be transmitted.

10.4.3 "N" - normal measurement with up to 8 wavelengths

Command string to the Reader:

STX Nh 3 405 550 620 ETX

(start of text, key "N", optional character "h" for measurements in the extended measurement range, number of measurement filters, filter wavelengths, end of text).

Note: remember to space between individual parameters.

The answer string to the computer contains one or more so-called headers in front of the measurement results to indicate the wavelength (W), the time the measurement was started (T), the plate identification number (optional) and a CR signal at the end of a line (carriage return).

The measurement results are multiplied by factor 1000, i.e. transmitted in [mOD]. Overflow values are displayed as 9999. A measurement value is always formatted right-justified to 5 places, always preceded by at least one leading space (hex 20). Generally, leading zeros are displayed as spaces. In case of a negative result, the number is preceded by a "-". The results are transmitted to the computer in the order A1 to H1 followed by a CR signal and the transmission of the next column.

Example:

STX W 405 T 9:13:12 CR	Start, header of first wavelength
1290..... 2499 CR	Result A1 - H1
..... CR	
.....145 CR	Result A12 - H12
W 550 T 9_ 13: 14 CR	Header of second wavelength
45 102..... 2200 CR	Result A1 - H1
.....2170 CR	Result A12 - H12
W 620 T 13: 1 CR	Result of third wavelength

1050.....-35 CR	Result A1 - A12
1000.....930 CR	Result A12 - H12
Cxx ETX	Checksum, end of text

10.4.4 "D" Dual wavelength measurement (bichromatic measurement)

Command string to the Reader (example):

STX Dh 450 620 ETX

(start of text, key "D", optional character "h" for measurements in the extended measurement range, measurement wavelength, reference wavelength, end of text)

The answer string to the computer contains a header in front of the measurement results to indicate the wavelengths (W), the time the measurement was started (T) and the plate identification number (optional). For general formatting see "N" - normal measurement.

Example:

STX W 450 620 T 12:30:01 CR	Start, header
1230.....2610 CR	Result A1 - H1
9999.....2003 CR	Result A12 - H12
Cxx ETX	Checksum, end of text

10.4.5 "M" scan measurement of 35 measurement points per well

Command string to the Reader (example): **STX M 450 ETX**
(start of text, key "M", measurement wavelength, end of text)

The answer string to the computer contains a header indicating the wavelength (W) and the time the measurement was started (T). Subsequently the measurement results are transmitted: 35 transmission values per well. These values are multiplied by factor 100 and formatted right-justified to 6 places, always preceded by at least one leading space. Step size per measurement point = 0.1753 mm. For general formatting see "N" - normal measurement.

Example:

STX W 450 T 14:30:20 CR	Start of text, header
50430 52790 52900... .. CR	Result A1 35 measurement points
..... CR	
49000 34500 CR	Result H12 35 measurement points
Cxx ETX	Checksum, end of text

10.4.6 "A" Agglutination measurement with adjustable number of well positions (1 to 31

Command string to the Reader (example):

STX A 450 5 -2 -1 0 1 2 ETX

(start of text, key "A", measurement wavelength, number of

measurement points, position of measurement points (-15 to +15 in relation to the center of the well).

The answer string to the computer contains a header indicating the wavelength (W), the number of measurement points per well (A), the time the measurement was started (T) and the plate identification number (optional). The measurement values are displayed as transmission values (multiplied by factor 100) and formatted right-justified to 6 places (preceded by at least one space). Step size per measurement point = 0.1753 mm.

Example:

STX W 450 A5 T 15:10:10 CR	Start of text, header
1029 2981 12902 91002.... CR	Result A1 - H1 Position -2
18935 199 CR	Result A1 - H1 Position -1
..... CR	etc.
18393 9848..... CR	Result A1 - H1 Position +2
17653 18384 65372..... CR	Result A2 - H2 Position -2
..... CR	etc.
12903 28734 8273 897..... CR	Result A12 - H12 Position +2
Cxx ETX	Checksum, end of text

10.4.7 "K" kinetic measurement with interval shaking

Command string to the Reader (example):

STX Khd 450 620 30 10 H 2 3 578 ETX

start of text, key "K", extended measurement range (h - optional), bichromatic (d - optional), time interval between kinetic cycles in [sec], number of measurements, interval shaking (H): shaking mode (1 = low, 2 = medium, 3 = high), shaking duration (maximum 60 sec), optional plate identification number, end of text.

The answer string to the computer contains at least two headers indicating the wavelength(s) (W), time the measurement was started (T - beginning with 0) and the number of measurement cycles (N). For general formatting see "N" - normal measurement.

Example:

STX W 450 620 T 00 N 1 CR	Start of text, Header for 1st cycle
1290 234.....-23 CR	Results A1 - H1
.....CR	etc.
.....9999.....145 CR	Results A12 - H12
W 450 620 T 30 N2 CR	Header for 2nd cycle
1359 389.....36 CR	Results A1 - H1
..... CR	etc.
W 450 620 T 300 N 10 CR	Header for last cycle
2524 672.....832 CR	Results A1 - H1
.....CR	etc.
2983 782.....943 CR	Results A12 - H12
Cxx ETX	Checksum, end of text

10.4.8 "PD" - Plate directory (transmission of plate memory directory)

Command string to the Reader (example):

STX PD ETX (start of text, key "PD", end of text)

The answer string transmitted to the computer contains the plate status (E = evaluated, M = measured, K = special kinetics), the plate identification number, the test identification number according to test directory and the test name of each plate in the directory.

Example:

STX E A123 2 HERPES CR	Start of text, 1st plate
E 1000001 12 HIV+2 CR	2nd plate
M 2214991 1 RUBESTAT CR	3rd plate
M 1000002 12 HIV+2 CR	4th plate
Cxx ETX	Checksum, end of text

10.4.9 "PR" - Plate results (transmission of plate results)

Command string to the Reader (example):

STX PR 100001 ETX

(start of text, key „PR“, plate identification number according to plate directory, end of text). The answer string to the computer transmits measurement and evaluation data.

Refer to the chapter „Transmission of Evaluation Results“.

10.4.10 "TD" - Test directory (transmission of test directory)

Command string to the Reader:

STX TD ETX (start of text, key "TD", end of text)

The answer string to the computer indicates the test identification number and the test name for each test in the directory.

Example:

STX 1 HIV+2 CR	Start of text, 1st test
2 HERPELISA CR	2nd test
3 RUBELLA CR	3rd test
HIV.SCREEN CR	4th test
Cxx ETX	Checksum, end of text

10.4.11 "TR" - Test run (plate measurement with predefined test)

Command string to the Reader (example): STX TR 5 100001 ETX (start of text, key "TR", test identification number, plate identification number (optional, according to directories), end of text).

If the plate identification number is specified, it must be different from the numbers already programmed in the directory, since if the numbers are identical, a "no acknowledgement" signal will be transmitted to the computer. If no particular plate identification number is specified, the last ID-number is automatically incremented.

A measurement is started and the raw data evaluated in accordance with the programmed test. The measurement and evaluation data are transmitted in the answer string to the computer. Refer to the chapter "Transmission of Evaluation Results".

10.4.12 "H" - Shaking

Command string to the Reader (example):

STX H 2 5 ETX

(start of text, key "H", shaking mode (1 = low, 2 = medium, 3 = high), shaking duration (maximum 60 sec), end of text). The Reader acknowledges the command, executes the shaking command but does not send an answer string back.

10.4.13 "B" - Transmission of plate identification number via barcode

Command string to the Reader:

STX B ETX

(start of text, key "B" (= read barcode label), end of text)

The plate carriage enters the device and an attempt is made to read the label via plate barcode. Upon acknowledgement the plate identification number is sent as an answer string to the computer.

Example: STX 100001 Cxx ETX

10.4.14 "R" - Repeat (repeat of the last data transmission)

If the last data transmission from the device was faulty (e.g. checksum error), it can be repeated using the command R.

Command string: **STX R ETX**

10.4.15 Error messages

If the measuring process is interrupted (light energy fluctuations, transport system, stop key...), communication is discontinued and an error message containing an error code number and a short description of the type of error is sent to the computer.

Example:

STX E 01 Plate transport Cxx ETX

10.5 Transmission of evaluation results

1. By selecting the output channel "RS232" in the Reader menu Plate or Run Test
2. By entering the remote control command "TR" (Run Test), "PR" (Plate Results)
3. By selecting "Transmit" with the function keys in the Reader menu Plate, Run Test.
4. By having programmed Outputchannel "RS232" in the Reader menu Setup Tests and having performed a measurement using this test.

Note: Transmission of pure ASCII data as per result data string pattern.

- The data are merely separated from each other by space.
- The entire data file is divided into individual blocks or fields.
- Only those blocks needed for the respective test are transmitted (e.g. no quantitative data for a qualitative test).
- The block length depends on the complexity of the test used.
- Blocks are unmistakably identified by their headers.
- Each block begins with a character (#) and a key word (e.g. header) representing the block beginning.
- It ends with the character for the beginning of the next block or the end mark (#End) at the end of the data file.
- The following key words have been defined:
Header / Message / Sample / Blank / Control / Cutoff / Standard / Curve

Basically two different types of blocks have been defined:

10.5.1 Blocks with multiple information

They consist of one or more lines, each line able to contain numerous information units. Only blocks with the key words "Header", "Message" or "Curve" at the block beginning can contain this type of information.

Example:

# Header	# = block beginning character, Header = key word
Format 110	Format = description of information, 110 = information
Plate ID 12234781	Data line

10.5.2 Blocks with the same type of information (=record format)

The key words "Sample", "Blanks", "Control", "Cutoff" and "Standard" are used at the beginning of this type of block. Depending on the number of samples, these blocks always contain the same sequence of information. A row of field names

defining the contents of the individual record follows after the key word. A record is always one line in length and contains data fields. Data fields contain the information defined by their field names, relating to one sample at a time.

Example:

```

block begin character
|   key word for the block beginning
|   |   Field names
|   |   |
# SAMPLE_ID POSITION MEAS MEAS_STAT CONC CONC_STAT
Schematic transmission format
# blockbegin - keyword-1
  datadescription 1 data 1-1
  datadescription 2 data 2-1
  datadescription 3 data 3-1 data 3-2, etc.
# blockbegin-keyword-2
  datadescription 1 data 1-1
  datadescription 2 data 2-1 data 2-2
  datadescription 3 data 3-1, etc.
# blockbegin-keyword-3 fieldname1 fieldname 2 fieldname 3
  datafield 1-1 datafield 1-2 datafield 1-3
  datafield 2-1 datafield 2-2 datafield 2-3
  datafield 3-1 datafield 3-2 datafield 3-3
  datafield 4-1 datafield 4-2 datafield 4-3
  datafield 5-1 datafield 5-2 datafield 5-3
# blockbegin-keyword-n fieldname 1 fieldname n
etc.
# end-keyword

```

10.6 Description of individual blocks

10.6.1 Header (block with multiple information)

Example:

# Header	
FORMAT 110	Version number of data format
PLATE_ID 123457	Plate identification number
TEST_ID HIV	Test identification
DATE92-JAN-09	Date
TIME13-01-14	Time of measurement
Evaluation quantitative qualitative	Evaluation mode

In addition the following information - depending on the test program - can be displayed in a separate line:

```

Basis_quantitative measurement_data
To indicate the basis of
Basis_quantitative relational_factor
the quantitative evaluation
Basis_qualitative measurement_data
To indicate the basis of
Basis_qualitative concentration
the qualitative evaluation
Basis_qualitative relational_factor

```

10.6.2 Message (block with multiple information)

For the transmission of error messages and warnings.

```
# Message
message_type message_number message_text
```

Example:

```
# Message
Warning 101 Standard_Status
```

Summary of error messages and warnings:

Error 1	Interpretation_not_possible
Error 2	Calculation_of_curve_not_possible
Error 3	Quantitative_evaluation_not_possible
Error 4	Calculation_of_relational_factor_not_possible
Error 5	Test_invalid_Auto_replicate_elimination
Error 6	Test_invalid_Control_validation
Warning 100	status_of_blank_abnormal
Warning 101	control_status
Warning 102	standard_status
Warning 110	COEFFICIENT_OF_CORRELATION_TOO_LOW

10.6.3 Sample (record format)

Display of measurement, identification and evaluation data for individual samples. (The line shown below is wrapped)

```
# SAMPLE ID POS MEAS MEAS_STAT CONC CONC_STAT GROUP
GROUP_STAT RELAT RELAT_STAT
```

The data fields can contain the sample number (ID), the plate position (POS), the measurement value (MEAS), the status of the measurement value (MEAS_STAT), the concentration (CONC), the concentration status (CONC_STAT), the group (GROUP), the group status (GROUP_STAT), the relation values (RELAT), the status of the relation values (RELAT_STAT).

10.6.4 Blanks (record format)

Display of validity range and positioning

```
# Blank PLATE/COLx/ROWx POS MEAS MEAS_STAT
```

The data fields contain the blank's validity range:

- on the entire plate (PLATE)
- for one column (COL 1-12)
- for one row (ROW 1-8)

In addition, they contain the blank's position on the plate (POS), its measurement value (MEAS) and the measurement value status (MEAS_STAT).

10.6.5 Control (record format)

Display of the set controls (The line shown below is wrapped):

```
# Control ID POS MEAS MEAS_STAT CONC CONC_STAT GROUP
GROUP_STAT RELAT RELAT_STAT
```

The data fields can contain the sample number (ID), the plate position (POS), the measurement value (MEAS), the status of the measurement value (MEAS_STAT), the concentration (CONC), the concentration status (CONC_STAT), the group (GROUP), the group status (GROUP_STAT), the relation value (RELAT), the status of the relation value (RELAT_STAT).

10.6.6 Cutoff (record format)

Display of the set cutoff values.

```
# Cutoff NR CUTOFF CUTOFF_STAT
```

The data fields contain the number of the cutoff (NR), its value (CUTOFF) and its status (CUTOFF_STAT).

10.6.7 Standards (record format)

Display of measurement, identification and evaluation data for the set standards. (The line shown below is wrapped)

```
# Sample ID POS MEAS MEAS_STAT CONC CONC_STAT GROUP
GROUP_STAT RELAT RELAT_STAT
```

The data fields can contain the sample number (ID), the plate position (POS), the measurement value (MEAS), the status of the measurement value (MEAS_STAT), the concentration (CONC), the concentration status (CONC_STAT), the group (GROUP), the group status (GROUP_STAT), the relation value (RELAT), the status of the relation value (RELAT_STAT).

10.6.8 Curve (Block with multiple information)

Display of curve fit mode and corresponding data.

```
# Curve
STATUS 0 (= okay)           - Curve status
STATUS 1 (= invalid)
```

FIT_MODE 0 LINEAR REGRESSION - Curve fit mode
 FIT_MODE 1 POINT_TO_POINT
 FIT_MODE 2 CUBIC_SPLINE
 FIT_MODE 3 4_PARAMETER FIT

 AXIS LIN LIN - Type of axis (for x and y axis)
 AXIS LIN LOG
 AXIS LOG LIN
 AXIS LOG LOG

 SLOPE 0.2345 - Curve coefficient (for linear regression:)
 YK 2.4456

 A 123.45 - Curve coefficient (for 4_parameter fit:)
 B 0.34E12
 C 1.2234E-8
 D 4.333E-14

10.6.9 Status

The status is an evaluation key for the respective plate position. It is only displayed in connection with measurement values (MEAS_STAT), concentrations (CONC_STAT), groups (GROUP_STAT) and relational values (RELAT_STAT) and can have one of the following values:

0	okay
1	invalid
2	rejected
3	overflow
4	underflow
5	extrapolated +
6	extrapolated -
7	auto rejected

10.7 Example of data transmission

Via the command "TR" a test was run remote controlled on the reader.

The following parameters have been set:

Plate layout with 4 vertical replicates, horizontal filling direction and 4 blanks on position A01 to D01.

Two standards on the positions A02-D02 and E03-H03 with the concentration value 1 ref. 100. As a curve fit method linear regression has been selected.

Data output:

```

HEADER
FORMAT 110
PLATE_ID 1000
TESTNAME TEST
DATE 2-DEC-1992
TIME 14:21:52
EVALUATION QUANTITATIVE
BASIS_QUANTITATIVE MEASUREMENT_DATA
# SAMPLE ID POS MEAS MEAS_STAT CONC CONC_STAT
1 A03+B03+C03+D03 .282 0 11.11 0
2 A04+B04+C04+D04 .420 0 21.13 0
3 A05+B05+C05+D05 .561 0 31.34 0
4 A06+B06+C06+D06 .699 0 41.34 0
5 A07+B07+C07+D07 .839 0 51.53 0
6 A08+B08+C08+D08 .977 0 61.5 0
7 A09+B09+C09+D09 1.118 0 71.7 0
8 A10+B10+C10+D10 1.256 0 81.72 0
9 A11+B11+C11+D11 1.394 0 91.75 0
10 A12+B12+C12+D12 1.534 0 100 3
11 E01+F01+G01+H01 1.141 0 73.39
12 E02+F02+G02+H02 1.326 0 86.82
13 E04+F04+G04+H04 1.690 0 100 3
14 E05+F05+G05+H05 1.877 0 100 3
15 E06+F06+G06+H06 2.059 0 100 3
16 E07+F07+G07+H07 2.247 0 100 3
17 E08+F08+G08+H08 2.434 0 100 3
18 E09+F09+G09+H09 2.623 0 100 3
19 E10+F10+G10+H10 2.814 0 100 3
20 E11+F11+G11+H11 3.000 3 100 3
21 E12+F12+G12+H12 3.000 3 100 3
# STANDARD ID POS MEAS MEAS_STAT CONC CONC_STAT
GROUP GROUP_STAT
S1 A02+B02+C02+D02 .142 0 1 0
S2 E03+F03+G03+H03 1.508 0 100 0
# CURVE
STATUS 0
FIT_MODE 0 LINEAR_REGRESSION
AXIS LIN LIN
CORREL 1
SLOPE .01379
YK .1285
# END
C@B

```

11 Maintenance

The device's lamp block and the optical system located underneath, are very sensitive to all light changes and thus also to outside influences such as dust particles, soiling, etc.

A few simple preventive measures can almost completely eliminate this risk.

11.1 General

WARNING:

PRIOR TO PERFORMING THE MAINTENANCE WORK DESCRIBED IN THE FOLLOWING CHAPTERS PLEASE MAKE SURE YOU WORK ACCORDING TO THE GUIDELINES GIVEN AT THE BEGINNING OF THIS MANUAL.

All maintenance work requiring opening of the instrument must be performed only with mains disconnected and must be performed by a technical qualified person!

There are only a few parts in the anthos HT1/2/3 which need regular maintenance.

11.2 Recommended regular inspection

The Anthos HT1/2/3 is designed in a way that during appropriate use no danger for the user is caused.

The correct function with regards to measurement performance is assured by an automatic check of the relevant technical parameters prior to each individual measurement. In case of a problem the instrument reports an error message.

Anthos recommends to have the instrument inspected by an authorized service partner at an interval of about 2 years. During this inspection the correct function of the instrument can be verified.


Additionally Anthos offers special test plates which may be used by the user to regularly verify the performance of the instrument.

11.3 Cleaning


1. Always cover the turned off device with the dust cover included in supply.
2. Clean filter: Turn on device, press right cursor, remove filter case from the right insert. Press sides of locking bar together, carefully slide bar and filter from the case. Blow with compressed nitrogen and clean manually with a cotton

swab or optical paper. Do not use alcohol or detergents containing water. Return filter to its case and check the order in the device's setup. Push filter-case into the filter transport system till it reaches the end stop and press left cursor. The filter case moves to its operating position.


3. Change air filter every four to six months;
Tools required: Philips no.1 or Pozidrive crosshead screwdriver, spare dust filter as included in supply.
 - Loosen screw A on rear of lamp casing (see drawing next page)
 - Slide lamp block casing forwards and lift off. Lay sideways on the outer casing without unplugging.
 - Loosen air filter screw on the front of the lamp block, remove screw and lock washers, remove air filter with filter lattice and insert new filter
 - Screw filter firmly into place
 - Return lamp block casing into place and fasten with screw and corresponding plastic washer

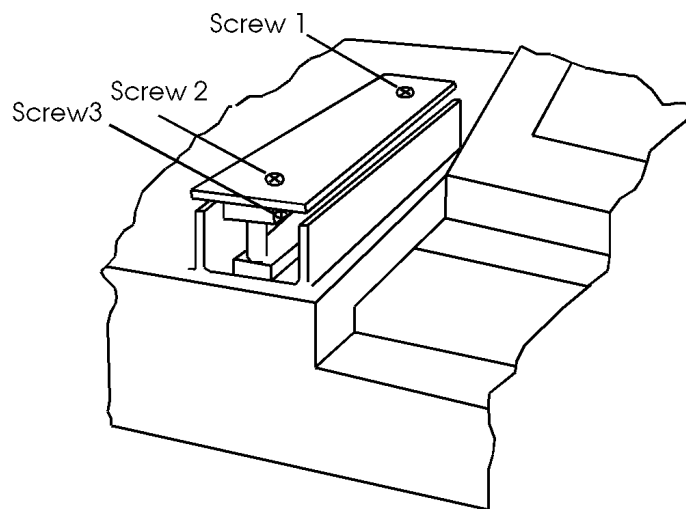

DUSTCOVER

 


FILTER CLEANING

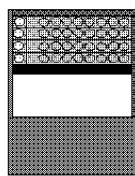

WITH
COTTON RODS
AND
OPTICAL PAPER



EXCHANGE AIRFILTER

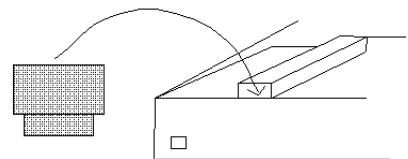

11.4 Changing the batteries

The batteries which provide the turned-off device with power to store tests and plate data should be replaced every two years. The following signs can indicate also weak batteries:

- Error message "Selected test contains invalid data"
- Error message "Plate data is corrupted - cannot be loaded"
- Error message "Not enough memory - heap overflow"

- Sudden changes in the settings under the device's SETUP (wavelengths, time and date setting)
- Difficulty in printing plate data, tests and memory contents

Tools required: Philips no.1 or Pozidrive crosshead screwdriver, 3 spare batteries (1.5V alkaline, format: LR6 / AA / AM3).

If instrument data is already corrupted, make a printout of all remaining tests and all stored plates and delete them afterwards:

Note: When changing the batteries as a preventive measure, it is not necessary to delete the stored data!

- Connect a printer and switch on both instruments.
- Go to the Main Menu by pressing STOP or F5-EXIT.
- Press in sequence F5-SETUP and F1-TEST .
- Press F4-DIR to make a printout of the test directory.
- Press F3-PRINT to make a printout of the parameters of the first test.
- Mark with cursor the second test and repeat procedure.
- Press in sequence F5 -CLEAR and F3-CLEAR STORAGE to delete all tests.
- After having performed a printout of all tests press STOP to go back to the Main menu.
- Press F4-PLATES and F2-REPORT. A printout of the first stored plate is performed.
- Mark with cursor the next plate and repeat procedure.

After having performed a printout of all stored plates Press F5-CLEAR and F3-CLEAR STORAGE to delete all plates.

- Loosen screw A on rear of lamp casing (see drawing).
- Slide lamp block cover forwards and lift off. Lay sideways on the outer casing without unplugging.
- Loosen tape and remove batteries from their holder.
- Insert three new 1.5 V alkaline batteries. The holder is marked + / - for the direction of inserting the batteries.

Note: Incorrectly inserted batteries will cause storage problems and result in a loss of data.

- Put lamp cover into place and fasten with screw and corresponding plastic washer.

To check:

Program new setup and several tests. Note corresponding data or print test parameters. Turn device off. Check after approx. 24 hours. If the data does not conform, check if the batteries are inserted in the right direction and if the cable is connected to the battery holder. If no error can be found, make a test printout and call a service technician.

11.5 Replacing the lamp block

Since the problems in and around the light source can have a variety of causes, the lamp block should only be exchanged

after consulting a service technician. The following signs are an indication of lamp problems:

- Error message: "Lamp high - Maximum detection"
- Error message: "Lamp low - Maximum detection"
- Error message: "Reference channel too low!"
- Error message during initialization test:
- "Low energy" - lamp energy is still sufficient to perform the measurement, however, a check of the lamp block is recommended
- "OV - energy" - lamp energy is too high; check diode values of the reference channel."
- "No energy" - lamp energy is too low; check the lamp block.

If the lamp block must be replaced, please follow the following directions:

Tools required: Philips no.1 or Pozidriv crosshead screwdriver, spare lamp block with original packing.

- Switch off instrument
- Loosen screw A on rear of lamp cover (see drawing.
- Slide lamp block cover forward and lift off. Lay sideways on the outer casing without unplugging.
- Loosen air filter screw on the front of the lamp block, remove screw and lock washer, lift off air filter and filter screen and lay aside.
- Loosen two unvarnished screws on the top of the lamp block and remove them.
- Loosen earthing screw under the right front corner of the block (only a few rotations with the screwdriver are sufficient).
- Evenly raise lamp block approximately 5 cm.

Note: Do not touch lamps.

- Loosen the two cable connections on the end of the block.

Note: pull off on plug only.

- Lay lamp block aside with the lamps facing up.
- Remove new lamp block from packing without touching lamps.
- Join plug connections .

Note: Do not connect plugs displaced laterally and insure correct lock (latches on the plug)


- Place lamp block evenly on guide bolts and press down uniformly.
- Tighten two screws on the top of the lamp block (do not forget washers)
- Tighten earthing screw under the right front corner of the block firmly.
- Fasten air filter.
- Place lamp block cover back on device.
- Turn device on and wait for initialization. Print diode values according to manual. In case of malfunction, check cable connections and firm fit of earthing screws. If the values do not improve, call a service technician.
- Tighten screws on lamp block cover (do not forget plastic washers). Place the old lamp block, annotating the device's

serial number, and send to the service technician in its original packing.

11.6 Replacing the fuses

In case of malfunction, the fuses (in the mains filter next to the mains socket on the rear of the device) can be checked and replaced.

- Open fuse-carrier next to the mains socket (see drawing) with a screwdriver
- Remove fuse
- Insert spare fuse included in supply (2 ampere, slow)
- Close fuse-carrier.
- Check set mains voltage next to fuse-carrier, turn device on and check functioning. In case of malfunction, call a service technician.

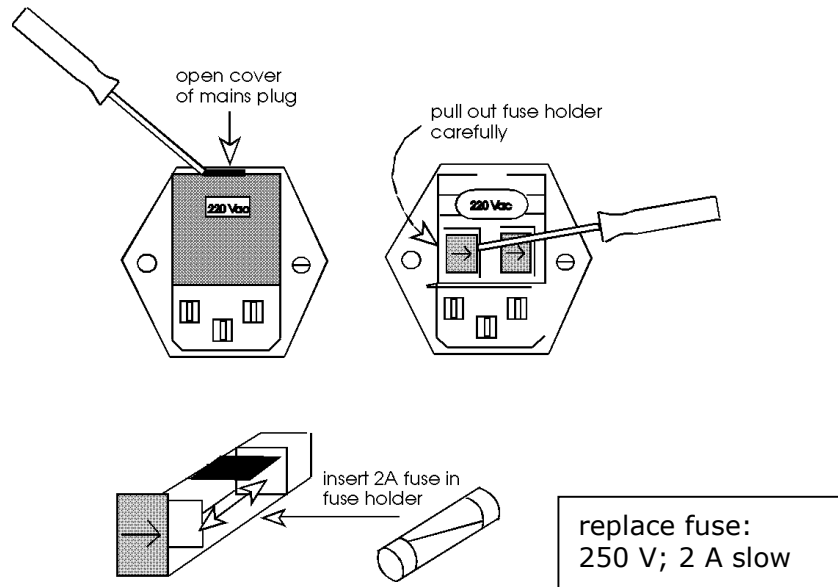

11.7 Self test - Interpretation

A diode printout should be printed each time an error occurs for self-interpretation and to facilitate error detection by the service technician. (A example for this printout is shown on the end of this chapter)

The HT1/2/3 by ANTHOS LABTEC has a light source consisting of 8 individual measurement channels and one reference channel which regulates the internal light control. Nine individually selected tungsten-halogen lamps are located on the lamp block for this purpose.

After the light beam has penetrated all lenses, microwells and filters the residual light (final transmission) is focused on 9 photodetectors.

Their analog signal is transformed into digital values on the ADC (Analog-Digital Converter).

The ADC can resolve up to 2^{12} values, resulting in a theoretical range between 0 and 4095. We call these values "Diode values", because they are measured by the light detecting photodiodes on the ADC.

Among other things, the test measurement provides the diode values for all 9 channels. The lamp function, the state of the optical system, the measurement linearity, etc. can be checked in this manner.

11.7.1 Performing the self-test

An automatic self-test is performed during each initialization. The same routine can be initiated in the service menu by pressing F1-SELF TEST. The raw data is printed by pressing F2-PRINT RAW DATA.

11.7.2 Self test interpretation

(see sample printout at the end of this chapter)

- **ADC check:** Check of the proper functioning of the Analog Digital Converter board.
- **Lamp controller check:** Check of the proper functioning of the lamp regulation.
- **Check of the energy for all installed wavelengths.**
- **Eprom checksums:** Check of the software chips by checksum calculation.
- **Diode values:** The diode values for all 8 measurement channels (A-H) and the reference channel (R) are shown. Remove the filter case from the device (press the right cursor in the main menu). Check the number of filters, filter position and wavelengths by referring to the protocol. Vacant positions in the filter case should not be programmed "0" to avoid error messages such as "Division by Zero" (better: position 5 = "5", position 6 = "6", etc.).
- The first part of the diode values indicates the so-called bright values. They should lie between 2500 and 4000. Vacant positions must be displayed as "4095", i.e. "Overflow" since the maximum lamp energy (white light) strikes the detector. Thus, the first position without a filter does not indicate an overflow-value, since normally no light can reach the detector due to the filter's lockbar. Usually the diode values decrease slightly for filters with shorter wavelengths. This is due to the fact that for filters with shorter wavelengths more energy is needed.
This has no effect on the measurement results.
- The second part of the diode value printout indicates the so called dark values. They are attained by measuring with turned off lamps and correspond to the minimum measurement values. For wavelengths greater than 400nm they must lie between 10 and 50, for wavelengths less than 400nm between 30 and 100. This difference is due to a built-in amplification switch.
- **Check ADC:** A further check of the proper functioning of the amplifier switch for wavelengths less than 400 nm. The

values for the first line should lie between 10 and 50, for the second line between 30 and 100.

- **Check lamp controller:** The values of the first line must clearly deviate from those of the second line (at least 100 diode values).

Example for a selftest-printout of the anthos HT

Anthos HTII Reader
Version 1.22
Self Test

Date: 30-APR-1999

Time: 7:32:29

Page# 1

Serial Nr.:

ADC check OK

Lamp controller check OK

1. Filter 620nm Energy for filter OK
2. Filter 540nm Energy for filter OK
3. Filter 492nm Energy for filter OK
4. Filter 450nm Energy for filter OK
5. Filter 405nm Energy for filter OK
6. Filter 340nm Energy for filter OK

E P R O M - C H E C K S U M

IC 12: 1B03 IC 15:0EBB
IC 13: C9E0 IC 16:5E34
IC14: 32F4 IC17: 9068

Diode Values	R	A	B	C	D	E	F	G	H	
1. 620nm	3532	3480	3357	3524	3355	3143	3452	3294	3524	
2. 540nm	3541	3501	3463	3542	3386	3229	3548	3361	3603	
3. 492nm	3455	3470	3475	3507	3330	3218	3509	3326	3511	
4. 450nm	3530	3470	3358	3501	3363	3142	3599	3302	3424	
5. 405nm	3291	3270	3416	3463	3394	3138	3471	3267	3498	
6. 340nm	3143	3075	3274	3258	3041	3034	3286	3060	3220	
7. 007nm	63	62	60	4095	61	55	57	61	60	
8. 008nm	4095	4095	4095	4095	4095	4095	4095	4095	4095	

Lamp off:

1. 620nm	21	23	20	23	22	21	23	20	21
2. 540nm	22	23	20	23	22	21	23	20	20
3. 492nm	21	24	20	23	22	20	22	20	21
4. 450nm	20	22	21	23	21	20	20	24	22
5. 405nm	21	23	21	23	22	20	22	21	21
6. 340nm	60	56	61	59	59	54	56	59	60
7. 007nm	59	55	60	60	58	55	59	59	59
8. 008nm	58	57	61	59	58	53	58	60	59

Check ADC:

1. 23	21	20	23	23	20	22	22	23
2. 60	56	51	59	59	51	54	56	59

Check Lamp controller:

1. 3543	3503	3467	3543	3385	3226	3551	3369	3606
2. 1070	1058	1054	1053	1023	969	1075	1017	1080

12 Principles of photometric measurement

Light is electromagnetic wave radiation.

Rays from 100nm to 400nm are defined as the ultraviolet spectrum of light.

Only rays in the range from 400nm to 780nm are visible for the human's eye, rays with longer wavelengths are called infrared.

Color impressions are caused by reflection of electromagnetic waves striking the surface of material substances. Substances absorb the complementary spectrum of their visual perceptible color. Hence green plants look green since they absorb red light (light of a wavelength perceived as red, e.g.: round about 750nm).

A photometer is an opto-electronical measuring device to determine the amount of transmission of a substance for light of a certain wavelength.

12.1 Units of measurement

Transmission is defined as the ration between:

- the total available light energy at the detector (measured through air) and
- the residual luminous energy after sample transmission at a specific wavelength.

Transmission is expressed as a percentage value that response in a nonlinear way to layer thickness and sample concentration.

Thus, one layer of a certain material has a 10% transmission whereas 4 layers of the same material only have 0.01%. For this reason the resulting values are converted internally into a linear measurement unit, the absorption.

The unit is expressed in OD (optical density).

$$\text{OD} = \log (1/\text{trans})$$

The absorption indicates the amount of light absorbed by the sample.

Conversion is performed according to the "**Bouger-Lambert-Beer**" law:

The logarithm of the ratio of the light intensity before (I_0) and after the sample (I) expresses the result in so called OD values (also: Extinction = E)

$$\text{E} = \text{OD} = \log I_0 / I$$


The optical density (OD) is determined according to the following formula:

$$E = OD = c * d * e$$

c = the concentration of the sample to be measured

d = the layer thickness of the sample to be measured

e = the molar extinction coefficient

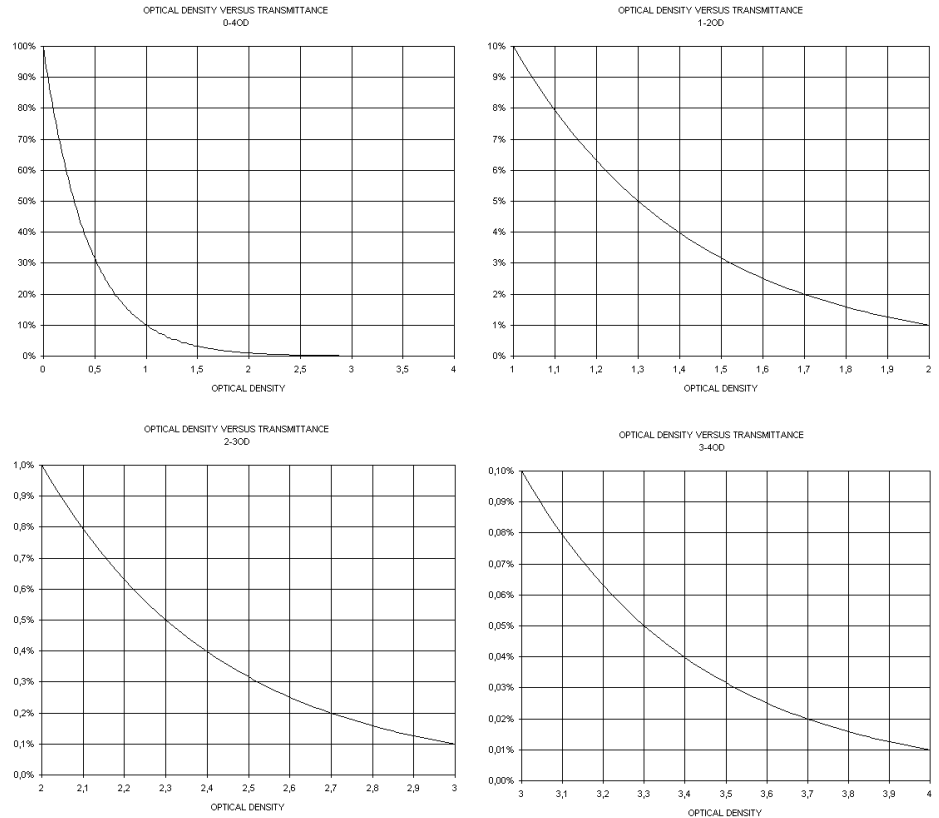

12.2 Measurement at specific wavelengths

Each substance to be measured has a specific transmission profile that indicates its concentration and composition. A measurement with white light renders different sample concentrations in a certain spectral range only to a small amount and accordingly inaccurate. A higher significance can be obtained by using only that part of the light spectrum which is relevant to prove the respective wavelength of the substance.


Due to this fact interference filters of a narrow banded wavelength spectrum are employed in this instrument.

Each substance has a certain absorption spectrum. A measurement should be performed by selecting the correct filter for the maximum absorption of the sample, because in this way the best differentiability of various sample concentrations can be reached. We can also state that the differing absorption amplitude of two uniformly composed samples, is a measure for the concentration.

For this reason measurements in the flank area of the spectrum are not very accurate and therefore to be avoided. In this

connection, it has to be taken into consideration that - when using interference filters - wavelength tolerances of ± 2 nm from the nominal wavelength value may also result in inaccuracies.


Each sample has an absorption minimum not specific to the measurement value, which can be deducted from the measurement value automatically by choosing a suitable reference wavelength. This kind of measurement is referred to as bichromatic.

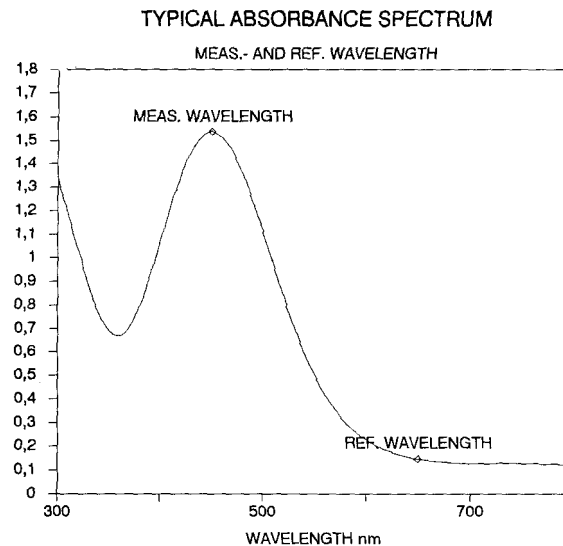

Absorption spectrum (measurement and reference wavelength)

12.3 Measurement range calibration

The device can resolve the luminous energy received by the detector into a maximum of 4095 values (diode values). Prior to each measurement, a calibration is performed automatically by measuring the dark value for 0% transmission and the bright value for 100% transmission (blank measurement against air). The resulting values correspond to the resolution limits which can be obtained in practice. The device has been pre-adjusted such that the diode values are greater than 0 for the dark value measurement and lower than the theoretical maximum for the bright value measurement (4095). This prevents an underflow or overflow of the theoretically possible limits. This initial calibration always guarantees a 100% measurement range, even if there is a change of the luminous energy.

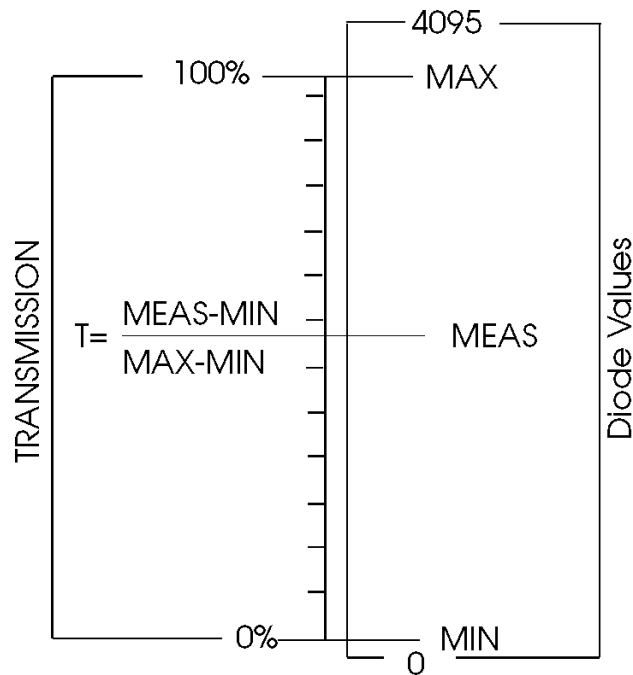

The formula to calculate a transmission value is as follows:

$$T = (\text{Meas} - \text{Min}) / (\text{Max} - \text{Min})$$

T = Transmission
Meas = Diode value during measurement
Min = Diode value at 0% measurement
Max = Diode value at 100% measurement

Example 1:

Max = 3600 ; Min = 20 ; Meas = 30
 $(30 - 20) / (3600 - 20) = 0.0028$
 $\text{Log} (1 / 0.0028) = 2.552 \text{ OD}$

Example 2:

Max = 3600; Min = 20; Meas 3000
 $(3000 - 20) / (3600 - 20) = 0.754$
 $\text{Log} (1 / 0.754) = 0.122 \text{ OD}$

12.4 Plate centering

The microplate is centered precisely under the optical axis of the measuring system prior to transport for the following reasons:

- to minimize the influence of the sample meniscus that causes variations of the sample layer thickness within the cavity,
- to minimize its effect as a concave lens while determining the optical density.

The centering preciseness is independent of the type or the manufacturer of the used plate. The plate is scanned in steps of 0.175 mm. This corresponds to approximately 35 measurements per well. The resulting OD-values are calculated as an average of two measurement values of the 5 center points of each well.

12.5 Reference channel

The device's lamp block consists of 9 independent tungsten-halogen lamps (8 measurement channels, 1 reference channel). Reference measurements compensate possible influences on the lamp's energy during measurement, as voltage fluctuations from the mains and the wear of the lamps. The reference channel also serves to regulate the lamp voltages according to the used wavelength. Any change of the reference value during course of measurement appears as a correction factor in the measurement.

13 Intended Use

This device is intended for photometric measurements in microplates in all kind of laboratories including clinical laboratories.

13.1 Quality control

The quality control criteria of a diagnostic kit have to be described in the package insert of the kit. For the performance of any reagent quality control it has to be referred exclusively to those instructions.

With an internal "Control Validation" (see chapter **5.8**), the software provides optionally a mean to program such quality controlling processes in the HT1/2/3.

13.2 Calibration

13.2.1 Instrument calibration

In some kit instructions the instrument calibration is referred to as "blanking against air". This is equivalent to the automatic instrument calibration described in chapter **1.3.2 Measuring process**.

13.2.2 Reagent Calibration (Blanking)

Generally reagent calibration is done by deducting a blank value from sample-, control- and standard values. See chapter **1.3.5 Rated operating conditions**.

The programming of blanks has to be done according to the instructions given in the package insert of a diagnostic kit.

13.3 Interpretation of measurement results

The interpretation of measurement values is subject to the limits of error and tolerances. See chapter **1.3.6 Limits of error and tolerance limits**).

Measurement data in the field of vertical photometry are dependent on liquid volumes, meniscus and microplate shapes. Therefore they are relative values and evaluation is possible only within one microplate.

For the interpretation of results it has to be referred to the instructions given in the package insert of a diagnostic kit.

It is the user's responsibility to check evaluated results with the corresponding raw data values.